

Atlas Copco Instruction Manual



Instruction Manual
for AC Generators
English

QAS 14 Kd S5 ESF

D1705M-E4BG

QAS 20 Kd S5 ESF

V2203M-E4BG



Machine Verhuur Oosterwolde

QAS 14 Kd S5 ESF QAS 20 Kd S5 ESF Instruction Manual for AC Generators

Instruction manual	5
Circuit diagrams	93

Original instructions

Printed matter N°
2960 3400 01
02/2020



ATLAS COPCO - PORTABLE ENERGY DIVISION
www.atlascopco.com

Warranty and Liability Limitation

Use only authorized parts.

Any damage or malfunction caused by the use of unauthorized parts is not covered by Warranty or Product Liability.

The manufacturer does not accept any liability for any damage arising from modifications, additions or conversions made without the manufacturer's approval in writing.

Neglecting maintenance or making changes to the setup of the machine can result in major hazards, including fire risk.

While every effort has been made to ensure that the information in this manual is correct, Atlas Copco does not assume responsibility for possible errors.

Copyright 2015, Grupos Electrógenos Europa, S.A.U., Zaragoza, Spain.

Any unauthorized use or copying of the contents or any part thereof is prohibited.

This applies in particular to trademarks, model denominations, part numbers and drawings.

Congratulations on the purchase of your AC generator. It is a solid, safe and reliable machine, built according to the latest technology. Follow the instructions in this booklet and we guarantee you years of trouble free operation. Please read the following instructions carefully before starting to use your machine.

While every effort has been made to ensure that the information in this manual is correct, Atlas Copco does not assume responsibility for possible errors. Atlas Copco reserves the right to make changes without prior notice.

Contents

1	Safety precautions for on-site generators	7	2.3.7	Drain plugs and filler caps.....	17	4.2.1	Starting.....	25
1.1	Introduction	7	2.3.8	Spillage free skid.....	17	4.2.2	During operation.....	25
1.2	General safety precautions.....	8	2.4	Electrical features	18	4.2.3	Stopping.....	25
1.3	Safety during transport and installation.....	9	2.4.1	Control and indicator panels	18	4.2.4	Setting the Qc1103™.....	26
1.4	Safety during use and operation	10	2.4.2	Output terminal board	19	4.3	Operating and setting Qc2103™.....	34
1.5	Safety during maintenance and repair	11	2.4.3	Electronic speed regulator.....	20	4.3.1	Starting.....	34
1.6	Tool applications safety	13	3	Installation and connection	21	4.3.2	During operation.....	34
1.7	Battery safety precautions.....	13	3.1	Lifting	21	4.3.3	Stopping.....	35
2	Main parts.....	14	3.2	Installation	21	4.3.4	Setting the Qc2103™.....	36
2.1	General description	14	3.2.1	Indoor installation.....	21	5	Maintenance.....	45
2.2	Markings	16	3.2.2	Outdoor installation	21	5.1	Maintenance schedule.....	45
2.3	Mechanical features.....	17	3.3	Connecting the generator	22	5.1.1	Use of maintenance schedule.....	49
2.3.1	Engine and alternator.....	17	3.3.1	Precautions for non-linear and sensitive loads.....	22	5.1.2	Use of service packs.....	49
2.3.2	Cooling system	17	3.3.2	Quality, minimum section and maximum length of cables.....	22	5.2	Preventing low loads	50
2.3.3	Safety devices.....	17	3.3.3	Connecting the load.....	23	5.2.1	General	50
2.3.4	Bodywork	17	4	Operating instructions	24	5.2.2	Risks of low load operation	50
2.3.5	Control panel.....	17	4.1	Before starting.....	24	5.2.3	Best practices.....	50
2.3.6	Data plate and serial number.....	17	4.2	Operating and setting Qc1103™.....	25	5.3	Alternator maintenance procedures.....	51
						5.3.1	Measuring the alternator insulation resistance.....	51

5.4	Engine maintenance procedures ...51	9	Options available for QAS 14 and QAS 20 units.....67	9.5.6	Inlet Shutoff valve (ISV)76
5.4.1	Engine oil level check51	9.1	Circuit diagrams.....67	10	Technical specifications..... 77
5.4.2	Coolant check51	9.2	Overview of the electrical options..67	10.1	Technical specifications for QAS 14 units.....77
5.5	Adjustments and service procedures53	9.3	Description of the electrical options67	10.1.1	Settings of switches77
5.5.1	Battery care.....53	9.3.1	Automatic battery charger67	10.1.2	Specifications of the engine/alternator/unit77
5.6	Engine consumable specifications 54	9.3.2	Battery switch.....68	10.2	Technical specifications for QAS 20 units.....82
5.6.1	Engine fuel specifications54	9.3.3	Engine coolant heater68	10.2.1	Settings of switches82
5.6.2	Engine oil specifications.....54	9.3.4	Outlet sockets (S) - 3-phase68	10.2.2	Specifications of the engine/alternator/unit82
5.6.3	Engine coolant specifications.....56	9.3.5	Outlet sockets (S) for Single phase option69	10.3	Dimension drawings87
6	Checks and trouble shooting .. 57	9.3.6	Single phase70	10.4	Conversion list of SI units into British units.....91
6.1	Engine troubleshooting.....57	9.3.7	Dual voltage (2V)70	10.5	Data plate91
6.2	Alternator troubleshooting60	9.3.8	IT-relay72		
6.3	Solving controller alarms.....61	9.3.9	“Electricité de France” (EDF)73		
6.3.1	Qc1103™ and Qc2103™ alarms and remedies61	9.3.10	Power Transfer Box (PTB).....74		
		9.3.11	Spillage free liquid sensor74		
7	Storage of the generator 64	9.4	Overview of the mechanical options75		
7.1	Storage.....64	9.5	Description of the mechanical options75		
7.2	Preparing for operation after storage.....64	9.5.1	Integrated spark arrestor.....75		
8	Disposal..... 65	9.5.2	External fuel tank connection (with/without quick couplings).....75		
8.1	General.....65	9.5.3	Undercarriage (axle, towbar, towing eyes)76		
8.2	WEEE65	9.5.4	Wheel chocks.....76		
8.3	Disposal of materials.....66	9.5.5	Transport bumpers.....76		

1 Safety precautions for on-site generators

To be read attentively and acted accordingly before towing, lifting, operating, performing maintenance or repairing the generator.

1.1 Introduction

The policy of Atlas Copco is to provide the users of their equipment with safe, reliable and efficient products. Factors taken into account are among others:

- the intended and predictable future use of the products, and the environments in which they are expected to operate,
- applicable rules, codes and regulations,
- the expected useful product life, assuming proper service and maintenance,
- providing the manual with up-to-date information.

Before handling any product, take time to read the relevant instruction manual. Besides giving detailed operating instructions, it also gives specific information about safety, preventive maintenance, etc.

Keep the manual always at the unit location, easy accessible to the operating personnel.

See also the safety precautions of the engine and possible other equipment, which are separately sent along or are mentioned on the equipment or parts of the unit.

These safety precautions are general and some statements will therefore not always apply to a particular unit.

Only people that have the right skills should be allowed to operate, adjust, perform maintenance or repair on Atlas Copco equipment. It is the responsibility of management to appoint operators with the appropriate training and skill for each category of job.

Skill level 1: Operator

An operator is trained in all aspects of operating the unit with the push-buttons, and is trained to know the safety aspects.

Skill level 2: Mechanical technician

A mechanical technician is trained to operate the unit the same as the operator. In addition, the mechanical technician is also trained to perform maintenance and repair, as described in the instruction manual, and is allowed to change settings of the control and safety system. A mechanical technician does not work on live electrical components.

Skill level 3: Electrical technician

An electrical technician is trained and has the same qualifications as both the operator and the mechanical technician. In addition, the electrical technician may carry out electrical repairs within the various enclosures of the unit. This includes work on live electrical components.

Skill level 4: Specialist from the manufacturer

This is a skilled specialist sent by the manufacturer or its agent to perform complex repairs or modifications to the equipment.

In general it is recommended that not more than two people operate the unit, more operators could lead to unsafe operating conditions. Take necessary steps to keep unauthorized persons away from the unit and eliminate all possible sources of danger at the unit.

When handling, operating, overhauling and/or performing maintenance or repair on Atlas Copco equipment, the mechanics are expected to use safe engineering practices and to observe all relevant local safety requirements and ordinances. The following list is a reminder of special safety directives and precautions mainly applicable to Atlas Copco equipment.

Neglecting the safety precautions may endanger people as well as environment and machinery:

- endanger people due to electrical, mechanical or chemical influences,
- endanger the environment due to leakage of oil, solvents or other substances,
- endanger the machinery due to function failures.

All responsibility for any damage or injury resulting from neglecting these precautions or by non-observance of ordinary caution and due care required in handling, operating, maintenance or repair, also if not expressly mentioned in this instruction manual, is disclaimed by Atlas Copco.

The manufacturer does not accept any liability for any damage arising from the use of non-original parts and for modifications, additions or conversions made without the manufacturer's approval in writing.

If any statement in this manual does not comply with local legislation, the stricter of the two shall be applied.

Statements in these safety precautions should not be interpreted as suggestions, recommendations or inducements that it should be used in violation of any applicable laws or regulations.

1.2 General safety precautions

- 1 The owner is responsible for maintaining the unit in a safe operating condition. Unit parts and accessories must be replaced if missing or unsuitable for safe operation.
- 2 The supervisor, or the responsible person, shall at all times make sure that all instructions regarding machinery and equipment operation and maintenance are strictly followed and that the machines with all accessories and safety devices, as well as the consuming devices, are in good repair, free of abnormal wear or abuse, and are not tampered with.
- 3 Whenever there is an indication or any suspicion that an internal part of a machine is overheated, the machine shall be stopped but no inspection covers shall be opened before sufficient cooling time has elapsed; this to avoid the risk of spontaneous ignition of oil vapour when air is admitted.
- 4 Normal ratings (pressures, temperatures, speeds, etc.) shall be durably marked.
- 5 Operate the unit only for the intended purpose and within its rated limits (pressure, temperature, speeds, etc.).
- 6 The machinery and equipment shall be kept clean, i.e. as free as possible from oil, dust or other deposits.
- 7 To prevent an increase in working temperature, inspect and clean heat transfer surfaces (cooler fins, intercoolers, water jackets, etc.) regularly. See the maintenance schedule.
- 8 All regulating and safety devices shall be maintained with due care to ensure that they function properly. They may not be put out of action.
- 9 Pressure and temperature gauges shall be checked regularly with regard to their accuracy. They shall be replaced whenever outside acceptable tolerances.
- 10 Safety devices shall be tested as described in the maintenance schedule of the instruction manual to determine that they are in good operating condition.
- 11 Mind the markings and information labels on the unit.
- 12 In the event the safety labels are damaged or destroyed, they must be replaced to ensure operator safety.
- 13 Keep the work area neat. Lack of order will increase the risk of accidents.
- 14 When working on the unit, wear safety clothing. Depending on the kind of activities these are: safety glasses, ear protection, safety helmet (including visor), safety gloves, protective clothing, safety shoes. Do not wear the hair long and loose (protect long hair with a hairnet), or wear loose clothing or jewellery.
- 15 Take precautions against fire. Handle fuel, oil and anti-freeze with care because they are inflammable substances. Do not smoke or approach with naked flame when handling such substances. Keep a fire-extinguisher in the vicinity.
- 16a **On-site generators (with earthing pin):**
Earth the generator as well as the load properly.
- 16b **On-site generators IT:**
Note: This generator is built to supply a sheer alternating current IT network.
Earth the load properly.

1.3 Safety during transport and installation

To lift a unit, all loose or pivoting parts, e.g. doors and towbar, shall first be securely fastened.

Do not attach cables, chains or ropes directly to the lifting eye; apply a crane hook or lifting shackle meeting local safety regulations. Never allow sharp bends in lifting cables, chains or ropes.

Helicopter lifting is not allowed.

It is strictly forbidden to dwell or stay in the risk zone under a lifted load. Never lift the unit over people or residential areas. Lifting acceleration and deceleration shall be kept within safe limits.

1 Before towing the unit:

- check the towbar, the brake system and the towing eye. Also check the coupling of the towing vehicle,
- check the towing and brake capability of the towing vehicle,
- check that the towbar, jockey wheel or stand leg is safely locked in the raised position,
- ascertain that the towing eye can swivel freely on the hook,
- check that the wheels are secure and that the tyres are in good condition and inflated correctly,
- connect the signalisation cable, check all lights and connect the pneumatic brake couplers,
- attach the safety break-away cable or safety chain to the towing vehicle,
- remove wheel chocks, if applied, and disengage the parking brake.

2 To tow a unit use a towing vehicle of ample capacity. Refer to the documentation of the towing vehicle.

3 If a unit is to be backed up by a towing vehicle, disengage the overrun brake mechanism (if it is not an automatic mechanism).

4 In case of transporting a non-trailer unit on a truck, fasten it to the truck by attaching straps via fork lift slots, via the holes in the frame at the front and back or via the lifting beam. To prevent damage, never put straps on the roof surface of the unit.

5 Never exceed the maximum towing speed of the unit (mind the local regulations).

6 Place the unit on level ground and apply the parking brake before disconnecting the unit from the towing vehicle. Unclip the safety break-away cable or safety chain. If the unit has no parking brake or jockey wheel, immobilize the unit by placing chocks in front of and/or behind the wheels. When the towbar can be positioned vertically, the locking device must be applied and kept in good order.

7 To lift heavy parts, a hoist of ample capacity, tested and approved according to local safety regulations, shall be used.

8 Lifting hooks, eyes, shackles, etc., shall never be bent and shall only have stress in line with their design load axis. The capacity of a lifting device diminishes when the lifting force is applied at an angle to its load axis.

9 For maximum safety and efficiency of the lifting apparatus all lifting members shall be applied as near to perpendicular as possible. If required, a lifting beam shall be applied between hoist and load.

10 Never leave a load hanging on a hoist.

11 A hoist has to be installed in such a way that the object will be lifted perpendicular. If that is not possible, the necessary precautions must be taken to prevent load-swinging, e.g. by using two hoists, each at approximately the same angle not exceeding 30° from the vertical.

12 Locate the unit away from walls. Take all precautions to ensure that hot air exhausted from the engine and driven machine cooling systems cannot be recirculated. If such hot air is taken in by the engine or driven machine cooling fan, this may cause overheating of the unit; if taken in for combustion, the engine power will be reduced.

13 Generators shall be stalled on an even, solid floor, in a clean location with sufficient ventilation. If the floor is not level or can vary in inclination, consult Atlas Copco.

14 The electrical connections shall correspond to local codes. The machines shall be earthed and protected against short circuits by fuses or circuit breakers.

15 Never connect the generator outlets to an installation which is also connected to a public mains.

16 Before connecting a load, switch off the corresponding circuit breaker, and check whether frequency, voltage, current and power factor comply with the ratings of the generator.

17 Before transportation of the unit, switch off all the circuit breakers.

1.4 Safety during use and operation

- 1 When the unit has to operate in a fire-hazardous environment, each engine exhaust has to be provided with a spark arrestor to trap incendiary sparks.
- 2 The exhaust contains carbon monoxide which is a lethal gas. When the unit is used in a confined space, conduct the engine exhaust to the outside atmosphere by a pipe of sufficient diameter; do this in such a way that no extra back pressure is created for the engine. If necessary, install an extractor. Observe any existing local regulations.

Make sure that the unit has sufficient air intake for operation. If necessary, install extra air intake ducts.
- 3 When operating in a dust-laden atmosphere, place the unit so that dust is not carried towards it by the wind. Operation in clean surroundings considerably extends the intervals for cleaning the air intake filters and the cores of the coolers.
- 4 Never remove a filler cap of the cooling water system of a hot engine. Wait until the engine has sufficiently cooled down.
- 5 Never refill fuel while the unit is running, unless otherwise stated in the Atlas Copco Instruction Book (AIB). Keep fuel away from hot parts such as air outlet pipes or the engine exhaust. Do not smoke when fuelling. When fuelling from an automatic pump, an earthing cable should be connected to the unit to discharge static electricity. Never spill nor leave oil, fuel, coolant or cleansing agent in or around the unit.
- 6 All doors shall be shut during operation so as not to disturb the cooling air flow inside the bodywork and/or render the silencing less effective. A door should be kept open for a short period only e.g. for inspection or adjustment.
- 7 Periodically carry out maintenance works according to the maintenance schedule.
- 8 Stationary housing guards are provided on all rotating or reciprocating parts not otherwise protected and which may be hazardous to personnel. Machinery shall never be put into operation, when such guards have been removed, before the guards are securely reinstalled.
- 9 Noise, even at reasonable levels, can cause irritation and disturbance which, over a long period of time, may cause severe injuries to the nervous system of human beings.

When the sound pressure level, at any point where personnel normally has to attend, is:

 - below 70 dB(A): no action needs to be taken,
 - above 70 dB(A): noise-protective devices should be provided for people continuously being present in the room,
 - below 85 dB(A): no action needs to be taken for occasional visitors staying a limited time only,
 - above 85 dB(A): room to be classified as a noise-hazardous area and an obvious warning shall be placed permanently at each entrance to alert people entering the room, for even relatively short times, about the need to wear ear protectors,
- above 95 dB(A): the warning(s) at the entrance(s) shall be completed with the recommendation that also occasional visitors shall wear ear protectors,
- above 105 dB(A): special ear protectors that are adequate for this noise level and the spectral composition of the noise shall be provided and a special warning to that effect shall be placed at each entrance.
- 10 The unit has parts of which the temperature can be in excess of 80 °C (176 °F), and which may be accidentally touched by personnel when opening the machine during or just after operation. Insulation or safety guards protecting these parts shall not be removed before the parts have cooled down sufficiently, and must be re-installed before operating the machine. As it is not possible to insulate or protect all hot parts by guards (e.g. exhaust manifold, exhaust turbine), the operator / service engineer must always be aware not to touch hot parts when opening a machine door.
- 11 Never operate the unit in surroundings where there is a possibility of taking in flammable or toxic fumes.
- 12 If the working process produces fumes, dust or vibration hazards, etc., take the necessary steps to eliminate the risk of personnel injury.
- 13 When using compressed air or inert gas to clean down equipment, do so with caution and use the appropriate protection, at least safety glasses, for the operator as well as for any bystander. Do not apply compressed air or inert gas to your skin or direct an air or gas stream at people. Never use it to clean dirt from your clothes.

- 14 When washing parts in or with a cleaning solvent, provide the required ventilation and use appropriate protection such as a breathing filter, safety glasses, rubber apron and gloves, etc.
- 15 Safety shoes should be compulsory in any workshop and if there is a risk, however small, of falling objects, wearing of a safety helmet should be included.
- 16 If there is a risk of inhaling hazardous gases, fumes or dust, the respiratory organs must be protected and depending on the nature of the hazard, so must the eyes and skin.
- 17 Remember that where there is visible dust, the finer, invisible particles will almost certainly be present too; but the fact that no dust can be seen is not a reliable indication that dangerous, invisible dust is not present in the air.
- 18 Never operate the generator in excess of its limits as indicated in the technical specifications and avoid long no-load sequences.
- 19 Never operate the generator in a humid atmosphere. Excessive moisture reduces the generator insulation.
- 20 Do not open electrical cabinets, cubicles or other equipment while voltage is supplied. If such cannot be avoided, e.g. for measurements, tests or adjustments, have the action carried out by a qualified electrician only, with appropriate tools, and ascertain that the required bodily protection against electrical hazards is applied.
- 21 Never touch the power terminals during operation of the machine.
- 22 Whenever an abnormal condition arises, e.g. excessive vibration, noise, odour, etc., switch the circuit breakers to OFF and stop the engine. Correct the faulty condition before restarting.
- 23 Check the electric cables regularly. Damaged cables and insufficient tightening of connections may cause electric shocks. Whenever damaged wires or dangerous conditions are observed, switch the circuit breakers to OFF and stop the engine. Replace the damaged wires or correct the dangerous condition before restarting. Make sure that all electric connections are securely tightened.
- 24 Avoid overloading the generator. The generator is provided with circuit breakers for overload protection. When a breaker has tripped, reduce the concerned load before restarting.
- 25 If the generator is used as stand-by for the mains supply, it must not be operated without control system which automatically disconnects the generator from the mains when the mains supply is restored.
- 26 Never remove the cover of the output terminals during operation. Before connecting or disconnecting wires, switch off the load and the circuit breakers, stop the machine and make sure that the machine cannot be started inadvertently or there is any residual voltage on the power circuit.
- 27 Running the generator at low load for long periods will reduce the lifetime of the engine.
- 28 When operating the generator in Remote or Auto mode, observe all relevant local legislation.

1.5 Safety during maintenance and repair

Maintenance, overhaul and repair work shall only be carried out by adequately trained personnel; if required, under supervision of someone qualified for the job.

- 1 Use only the correct tools for maintenance and repair work, and only tools which are in good condition.
- 2 Parts shall only be replaced by genuine Atlas Copco replacement parts.
- 3 All maintenance work, other than routine attention, shall only be undertaken when the unit is stopped. Steps shall be taken to prevent inadvertent starting. In addition, a warning sign bearing a legend such as "work in progress; do not start" shall be attached to the starting equipment.
On engine-driven units the battery shall be disconnected and removed or the terminals covered by insulating caps.
On electrically driven units the main switch shall be locked in open position and the fuses shall be taken out. A warning sign bearing a legend such as "work in progress; do not supply voltage" shall be attached to the fuse box or main switch.
- 4 Prior to stripping an engine or other machine or undertaking major overhaul on it, prevent all movable parts from rolling over or moving.

- 5 Make sure that no tools, loose parts or rags are left in or on the machine. Never leave rags or loose clothing near the engine air intake.
- 6 Never use flammable solvents for cleaning (fire-risk).
- 7 Take safety precautions against toxic vapours of cleaning liquids.
- 8 Never use machine parts as a climbing aid.
- 9 Observe scrupulous cleanliness during maintenance and repair. Keep away dirt, cover the parts and exposed openings with a clean cloth, paper or tape.
- 10 Never weld on or perform any operation involving heat near the fuel or oil systems. Fuel and oil tanks must be completely purged, e.g. by steam-cleaning, before carrying out such operations. Never weld on, or in any way modify, pressure vessels. Disconnect the alternator cables during arc welding on the unit.
- 11 Support the towbar and the axle(s) securely if working underneath the unit or when removing a wheel. Do not rely on jacks.
- 12 Do not remove any of, or tamper with, the sound-damping material. Keep the material free of dirt and liquids such as fuel, oil and cleansing agents. If any sound-damping material is damaged, replace it to prevent the sound pressure level from increasing.
- 13 Use only lubricating oils and greases recommended or approved by Atlas Copco or the machine manufacturer. Ascertain that the selected lubricants comply with all applicable safety regulations, especially with regard to explosion or fire-risk and the possibility of decomposition or generation of hazardous gases. Never mix synthetic with mineral oil.
- 14 Protect the engine, alternator, air intake filter, electrical and regulating components, etc., to prevent moisture ingress, e.g. when steam-cleaning.
- 15 When performing any operation involving heat, flames or sparks on a machine, the surrounding components shall first be screened with non-flammable material.
- 16 Never use a light source with open flame for inspecting the interior of a machine.
- 17 When repair has been completed, the machine shall be barred over at least one revolution for reciprocating machines, several revolutions for rotary ones to ensure that there is no mechanical interference within the machine or driver. Check the direction of rotation of electric motors when starting up the machine initially and after any alteration to the electrical connection(s) or switch gear, to check that the oil pump and the fan function properly.
- 18 Maintenance and repair work should be recorded in an operator's logbook for all machinery. Frequency and nature of repairs can reveal unsafe conditions.
- 19 When hot parts have to be handled, e.g. shrink fitting, special heat-resistant gloves shall be used and, if required, other body protection shall be applied.
- 20 When using cartridge type breathing filter equipment, ascertain that the correct type of cartridge is used and that its useful service life is not surpassed.
- 21 Make sure that oil, solvents and other substances likely to pollute the environment are properly disposed of.
- 22 Before clearing the generator for use after maintenance or overhaul, submit it to a test run, check that the AC power performance is correct and that the control and shutdown devices function correctly.

1.6 Tool applications safety

Apply the proper tool for each job. With the knowledge of correct tool use and knowing the limitations of tools, along with some common sense, many accidents can be prevented.

Special service tools are available for specific jobs and should be used when recommended. The use of these tools will save time and prevent damage to parts.

1.7 Battery safety precautions


When servicing batteries, always wear protecting clothing and glasses.

- 1 The electrolyte in batteries is a sulphuric acid solution which is fatal if it hits your eyes, and which can cause burns if it contacts your skin. Therefore, be careful when handling batteries, e.g. when checking the charge condition.
- 2 Install a sign prohibiting fire, open flame and smoking at the post where batteries are being charged.
- 3 When batteries are being charged, an explosive gas mixture forms in the cells and might escape through the vent holes in the plugs.
Thus an explosive atmosphere may form around the battery if ventilation is poor, and can remain in and around the battery for several hours after it has been charged. Therefore:
 - never smoke near batteries being, or having recently been, charged.
 - never break live circuits at battery terminals, because a spark usually occurs.
- 4 When connecting an auxiliary battery (AB) in parallel to the unit battery (CB) with booster cables: connect the + pole of AB to the + pole of CB, then connect the - pole of CB to the mass of the unit. Disconnect in the reverse order.


2 Main parts

2.1 General description

The QAS 14 Kd S5 and QAS 20 Kd S5 are AC generators, built for continuous running at sites where no electricity is available or as stand-by in cases of interruption of the mains. The generator operates at 50 Hz, 230V in line-to-neutral mode and 400V in line-to-line mode. The QAS 14 Kd S5 and QAS 20 Kd S5 generators are driven by a fluid-cooled diesel engine, manufactured by KUBOTA. An overview of the main parts is given in the diagram below.

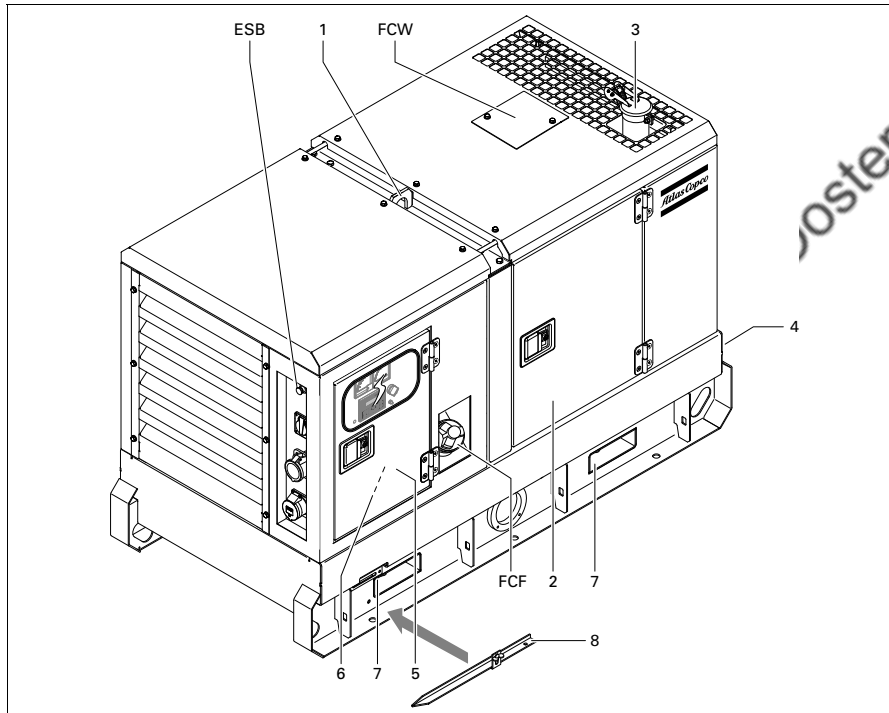

- | | |
|-----|--|
| 1 | Lifting beam |
| 2 | Side doors |
| 3 | Engine exhaust |
| 4 | Data Plate |
| 5 | Door, access to control and indicator panel |
| 6 | Output terminal board |
| 7 | Forklift holes |
| 8 | Earthing rod (not available in combination with an IT-relay) |
| ESB | Emergency stop button |
| FCF | Filler cap fuel |
| FCW | Filler cap coolant |

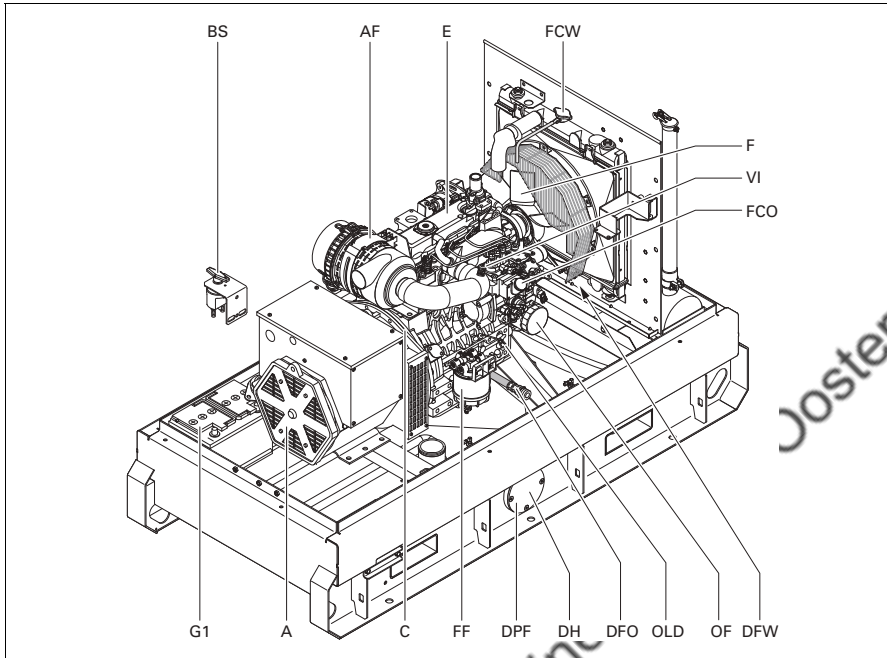

A	Alternator
AF	Air filter
BS	Battery switch
C	Coupling
DFO	Drain flexible engine oil
DFW	Drain flexible coolant
DH	Drain and access hole (in the frame)
DPF	Drain plug fuel
E	Engine
F	Fan
FCF	Filler cap fuel
FCO	Filler cap engine oil
FCW	Filler cap coolant
FF	Fuel filter
G1	Battery
OF	Oil filter
OLD	Engine oil level dipstick
VI	Vacuum indicator

2.2 Markings

Markings provide instructions and information. They also warn of hazards. For convenience and safety, keep all markings in legible condition, replacing them when damaged or missing. Replacement markings are available from the factory.

A brief description of all markings provided on the generator is given hereafter. The precise location of all markings can be found in the parts manual of this generator.



Indicates that the engine exhaust is a hot and harmful gas, which is toxic in case of inhalation. Always make sure that the unit is operated outside or in a well-ventilated room.



Indicates that these parts can become very hot during operation (e.g. engine, cooler, etc.). Always make sure that these parts are cooled down before touching them.



 
Indicates the sound power level in accordance with Directive 2000/14/EC (expressed in dB (A)).



Indicates that the guiding rods may not be used to lift the generator. Always use the lifting rod in the roof of the generator to lift it.



Indicates a lifting point of the generator.



Indicates that the generator may be refueled with diesel fuel only.



Indicates the drain for the engine oil.



Indicates the drain for the coolant.



Indicates the drain plug for the engine fuel.



 
Use PAROIL E only.



Indicates the different earthing connections on the generator.



Indicates that the alternator should not be cleaned with high pressurised water.



Indicates the battery switch.



Indicates that the unit may start automatically and that the instruction book has to be consulted prior to use.



Read the instruction manual before using the lifting eye.



Indicates the 3-way valve.

Atlas Copco		QAS 14 Kd, QAS 20 Kd	
SERVICE PACK			
	XXXXXXXXXXXX	XXXX XXXX XX	XXXXXXXXXX
	XXXXXXXXXX	XXXX XXXX XX	XXXXXXXXXX
Engine oil			
	PAROIL E	PAROIL Extra	
	XX XXXXXXX	XXXX XXXXX XX	XXXX XXXXX XX
	XX XXXXXXX	XXXX XXXXX XX	XXXX XXXXX XX
	XX XXXXXXX	XXXX XXXXX XX	XXXX XXXXX XX
	XX XXXXXXX	XXXX XXXXX XX	XXXX XXXXX XX
Engine coolant			
	PARCOOL EG		
	XX XXXXXXX	XXXX XXXXX XX	
	XX XXXXXXX	XXXX XXXXX XX	
	XX XXXXXXX	XXXX XXXXX XX	

Indicates the part numbers of the different service packs and of the engine oil. These parts can be ordered to the factory.

2.3 Mechanical features

The mechanical features described in this chapter are standard provided on this generator. For all other mechanical features, see “Overview of the mechanical options” on page 75.

2.3.1 Engine and alternator

The alternator is driven by a fluid-cooled diesel engine. The engine’s power is transmitted through a direct disc coupling.

The generator houses a single bearing alternator with a dedicated voltage regulator.

The synchronous brushless alternator has Class H rotor and stator windings in an IP23 housing.

2.3.2 Cooling system

The engine is provided with a water cooler. The cooling air is generated by a fan, driven by the engine.

2.3.3 Safety devices

The engine is equipped with low oil pressure and high coolant temperature shut-down switches.

2.3.4 Bodywork

The alternator, the engine, the cooling system, etc. are enclosed in a sound-insulated bodywork that can be opened by means of side doors (and service plates).

The generator can be lifted by using the lifting eye integrated in the bodywork (roof). To be able to lift the QAS 14-20 by means of a forklift, rectangular slots are provided in the frame.

The earthing rod, connected to the generator’s earth terminal is located at the bottom of the frame on the outside.

2.3.5 Control panel

The control panel grouping control module, control switch etc., is placed at the rear end.

2.3.6 Data plate and serial number

The generator is furnished with a data plate showing the product code, the unit number and the power output (see “Data plate” on page 91).

The serial number is located on the right-hand front side of the frame.

2.3.7 Drain plugs and filler caps

The drain holes for the engine oil, the coolant and the plug for the fuel, are located and labelled on the frame. The fuel drain plug is located at the front, the others at the service side.

The drain flexible for engine oil can be brought to the outside of the generator through the drain hole.



The drain hole can also be used to guide external fuel tank connections. When connecting an external fuel tank, use the 3-way valves. Refer to External fuel tank connection (with/without quick couplings).

The filler cap for the engine coolant is accessible via an opening in the roof. The fuel filler cap is located in the side panel.

2.3.8 Spillage free skid

A Spillage free skid with forklift slots allows the customer to transport the generator easily with a forklift. It avoids accidental spilling of engine fluids and thus helps to protect the environment.

The leaking fluid can be removed via drain holes, secured by drain plugs. Tighten the plugs firmly and check for leakages. When removing the leaking fluid, observe all relevant local legislation.


2.4 Electrical features

The electrical features described in this chapter are standard provided on this generator. For all other electrical features, see “Overview of the electrical options” on page 67.

2.4.1 Control and indicator panels

To operate the generator, the QAS 14-20 control panel contains a Qc1103™ or Qc2103™ controller. This controller is located inside the control cubicle, and communicates via a display located at the front. The controller will carry out all necessary tasks to control and protect the generator, which allows operation in many different applications.

2.4.1.1 Control panel with Qc1103™ controller

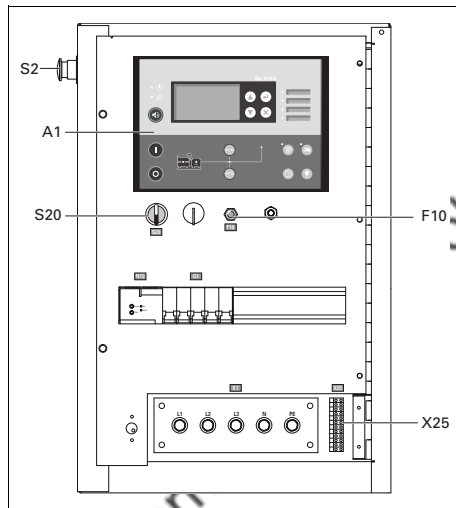

A1 Qc1103™ display

F10 Fuse

The fuse trips when the current from the battery to the engine control circuit exceeds its setting. The fuse can be reset by pushing the button.

S2 Emergency stop button

Push the button to stop the generator in case of an emergency. When the button is pressed, it must be unlocked, before the generator can be restarted. The emergency stop button can be secured in the locked position with the key, to avoid unauthorized use.


S20 ON/OFF switch

Position O: No voltage is supplied to the Qc1103™ module, the generator will not start.

Position I: Voltage is supplied to the Qc1103™ module, it is possible to start up the generator.

X25 Terminal strip

2.4.1.2 Control panel with Qc2103™ controller

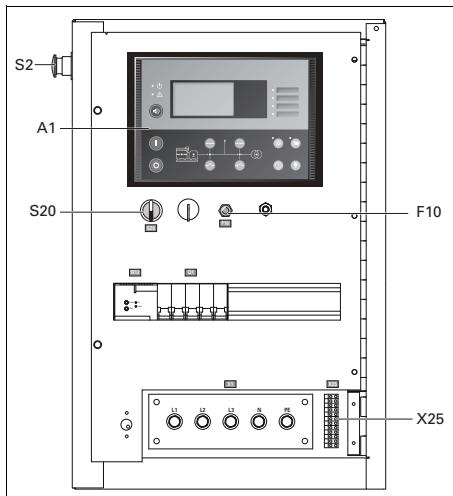

A1 Qc2103™ display

F10 Fuse

The fuse trips when the current from the battery to the engine control circuit exceeds its setting. The fuse can be reset by pushing the button.

S2 Emergency stop button

Push the button to stop the generator in case of an emergency. When the button is pressed, it must be unlocked, before the generator can be restarted. The emergency stop button can be secured in the locked position with the key, to avoid unauthorized use.

S20 ON/OFF switch


Position O: No voltage is supplied to the Qc2103™ module, the generator will not start.

Position I: Voltage is supplied to the Qc2103™ module, it is possible to start up the generator.

X25 Terminal strip

2.4.2 Output terminal board

The cubicle provides a terminal board for easier connection of cables. It is situated below the control and indicator panel.

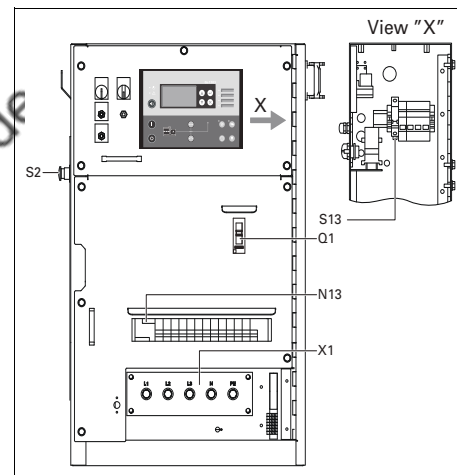

S2 Emergency stop button

Push the button to stop the generator in case of an emergency. When the button is pressed, it must be unlocked, by turning it anti-clockwise, before the generator can be restarted. The emergency stop button can be secured in the locked position with the key, to avoid unauthorized use.

Q1.....Main circuit breaker

Interrupts the power supply to X1 when a short-circuit occurs at the load side, or when the earth leak protection (30 mA) or the overcurrent protection (QAS 14: 20 A, QAS 20: 32 A) is activated or when the shunt trip is energized. It must be reset manually after eliminating the problem.

X1.....Main power supply (400 V AC)

Terminals L1, L2, L3, N (= neutral) and PE (= earthing), hidden behind the control panel door and behind a small transparent door.

N13.....Earth leak detector

Detects and indicates an earth fault current and activates the main circuit breaker Q1. The detection level can be set at 0.03 A fixed with instantaneous trip but can also be adjusted between 0.1 A and 1 A with time delayed (0 - 0.5 sec) trip. N13 has to be reset manually after eliminating the problem (reset button marked R). It can be overridden by means of the earth leak switch (S13, labelled IΔN) but has to be tested monthly (by pushing test button T).

S13Lock-out switch for earth fault protection (N13)

This switch is located inside the cubicle and is labelled IΔN.

Position O: No tripping of the main circuit breaker Q1 when an earth fault occurs.

Position 1: Tripping of the main circuit breaker Q1 when an earth fault occurs.



Position O will only be used in conjunction with an external earth fault protection unit (e.g. integrated in a distribution board).

If S13 is in position O, proper earthing is of the utmost importance for the safety of the user. Eliminating any earth fault protection can lead to serious injury or even death for anybody touching the unit or the load.

2.4.3 Electronic speed regulator


The electronic speed regulator makes sure that the output frequency of the generator is fixed, independent of the amount of load.

3 Installation and connection

3.1 Lifting

The lifting eye, to lift the generator by means of a hoist, is integrated in the bodywork and easily accessible from the outside. The recesses in the roof have guiding rods at both sides.

When lifting the generator, the hoist has to be placed in such a way that the generator, which must be placed level, will be lifted vertically.

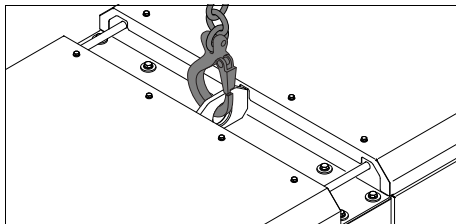


Never use the guiding rods to lift the generator.



Lifting acceleration and deceleration must be kept within safe limits (max. 2 g).

Helicopter lifting is not allowed.

To be able to lift the generator by means of a forklift, rectangular slots are provided at the bottom of the frame.

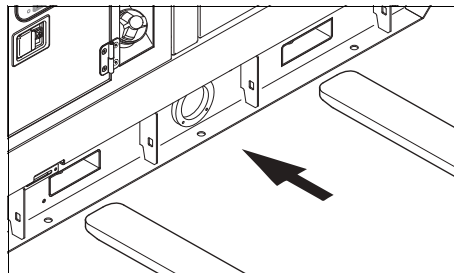

3.2 Installation

3.2.1 Indoor installation

If the generator is operated indoors, install an exhaust pipe of sufficient diameter to duct the engine exhaust towards the outside. Check for sufficient ventilation so that the cooling air is not recirculated.



For more information about indoor installation, consult your local Atlas Copco dealer.

3.2.2 Outdoor installation

- Place the generator on a horizontal, even and solid floor.
- The generator should be kept with the doors closed, in order to avoid the ingress of water and dust. Dust ingress reduces the lifetime of filters and may reduce your generator's performance.
- Check that the engine exhaust is not directed towards people.
- Locate the rear end of the generator upwind, away from contaminated wind streams and walls. Avoid recirculation of exhaust air from the engine. This causes overheating and engine power decrease.

- Leave enough space for operation, inspection and maintenance (at least 1 meter at each side).
- Check that the inner earthing system is in compliance with the local legislation.
- Use coolant for the engine cooling system. Refer to the Engine instruction book for the proper coolant mixture.
- Check the tightness of the bolts and nuts.
- Check that the cable end of the earthing rod is connected to the earth terminal.



The generator is wired for a TN-system to IEC 364-3, i.e. one point in the power source directly earthed - in this case the neutral. The exposed conductive parts of the electric installation must be directly connected to the functional earth. If operating the generator in another power system, e.g. an IT-system, other protective devices required for these types must be installed. In any case only a qualified electrician is authorized to remove the connection between the neutral (N) and earth terminals in the terminal box of the alternator.

3.3 Connecting the generator

3.3.1 Precautions for non-linear and sensitive loads



Non-linear loads draw currents with high contents in harmonics, causing distortion in the wave form of the voltage generated by the alternator.

The most common non-linear, 3-phase loads are thyristor/rectifier-controlled loads, such as convertors supplying voltage to variable speed motors, uninterruptable power supplies and Telecom supplies. Gas-discharge lighting arranged in single-phase circuits generate high 3rd harmonics and risk for excessive neutral current.

Loads most sensitive to voltage distortion include incandescent lamps, discharge lamps, computers, X-ray equipment, audio amplifiers and elevators.

Consult Atlas Copco for measures against the adverse influence of non-linear loads.

3.3.2 Quality, minimum section and maximum length of cables

The cable connected to the terminal board of the generator must be selected in accordance with local legislation. The type of cable, its rated voltage and current carrying capacity are determined by installation conditions, stress and ambient temperature. For flexible wiring, rubber-sheathed, flexible core conductors of the type H07 RN-F (Cenelec HD.22) or better must be used.

The following table indicates the maximum allowable 3-phase currents (in A), at an ambient temperature of 40°C, for cable types (multiple and single core PVC insulated conductors and H07 RN-F multiple core conductors) and wire sections as listed, in accordance with VDE 0298 installation method C3. Local regulations remain applicable if they are stricter than those proposed below.

Wire section (mm ²)	Max. current (A)		
	Multiple core	Single core	H07 RN-F
2.5	22	25	21
4	30	33	28
6	38	42	36
10	53	57	50
16	71	76	67
25	94	101	88
35	114	123	110
50	138	155	138
70	176	191	170
95	212	228	205

The lowest acceptable wire section and the corresponding maximum cable or conductor length for multiple core cable or H07 RN-F, at rated current (20 A), for a voltage drop e lower than 5% and at a power factor of 0.80, are respectively 2.5 mm² and 144 m. In case electric motors must be started, oversizing the cable is advisable.

The voltage drop across a cable can be determined as follows:

$$e = \frac{\sqrt{3} \cdot I \cdot L \cdot (R \cdot \cos \varphi + X \cdot \sin \varphi)}{1000}$$

e = Voltage drop (V)

I = Rated current (A)

L = Length of conductors (m)

R = Resistance (Ω/km to VDE 0102)

X = Reactance (Ω/km to VDE 0102)

3.3.3 Connecting the load

3.3.3.1 Site distribution panel

If outlet sockets are provided, they must be mounted on a site distribution panel supplied from the terminal board of the generator and in compliance with local regulations for power installations on building sites.

3.3.3.2 Protection



For safety reasons, it is necessary to provide an isolating switch or circuit breaker in each load circuit. Local legislation may impose the use of isolating devices which can be locked.

- Check whether frequency, voltage and current comply with the ratings of the generator.
- Provide a load cable, without excessive length, and lay it out in a safe way without forming coils.

- Open the door of the control and indicator panel and the transparent door in front of the terminal board X1.
- Provide the wire ends with cable lugs suited for the cable terminals.
- Loosen the cable clamp and push the wire ends of the load cable through the orifice and clamp.
Connect the wires to the proper terminals (L1, L2, L3, N and PE) of X1 and tighten the bolts securely.
- Tighten the cable clamp.
- Close the transparent door in front of X1.

4 Operating instructions



In your own interest, always strictly observe all relevant safety instructions.

Do not operate the generator in excess of the limitations mentioned in the Technical Specifications.

Local rules concerning the setting up of low voltage power installations (below 1000 V) must be respected when connecting site distribution panels, switch gear or loads to the generator.

At each start-up and at any time a new load is connected, the earthing and protections (GB trip and earth leakage relay) of the generator must be verified. Earthing must be done either by the earthing rod or, if available, by an existing, suitable earthing installation. The protective system against excessive contact voltage is not effective unless a suitable earthing is made.

4.1 Before starting

- With the generator standing level, check the engine oil level and top up if necessary. The oil level must be near to, but not exceed the high mark on the engine oil level dipstick.
- Check the coolant level in the expansion tank of the engine cooling system. The coolant level must be near to the FULL mark. Add coolant if necessary.
- Drain any water and sediment from the fuel pre-filter. Check the fuel level and top up if necessary. It is recommended to fill the tank after the day's operation to prevent water vapor in a nearly empty tank from condensing.
- Drain leaking fluid from the frame.
- Check the vacuum indicator of the air filter. If the red part shows completely, replace the filter element.
- Press the dust evacuator of the air filter to remove dust.
- Check the generator for leakage, tightness of wire terminals, etc. Correct if necessary.
- Check that circuit breaker Q1 is switched off.
- Check that fuse F10 has not tripped and that the emergency stop is in the OUT position.
- Check that the load is switched off.
- Check that the earth fault protection (N13) has not tripped (reset if necessary).

4.2 Operating and setting Qc1103™

4.2.1 Starting

- Switch on the battery switch, if applicable.
- Turn starter switch S20 to position I (ON) to power up the Qc1103™ controller.
- Switch off circuit breaker Q1.
- Select the desired operating mode on the Qc1103™ controller (see chapter “Running modes” on page 32 for the possible selections).
- To start-up the generator in MANUAL mode:
 - Press the **MAN** push button on the Qc1103™ controller to activate MANUAL mode.
 - Use the **START** button to start-up the generator.
 - The unit will start.
In cold conditions the unit might not start from the first attempt. The controller will make 3 start attempts.
 - Allow the generator to start-up till voltage and frequency are OK (**Hz/V ok** lights up).
 - Switch on circuit breaker Q1.
- To start-up the generator in AUTO mode:
 - Press the **AUTO** push button on the Qc1103™ controller to activate AUTO mode.
 - Switch on circuit breaker Q1.
 - The unit will start automatically at a start command (e.g. a remote start signal or set timer).

In cold conditions the unit might not start from the first attempt. The controller will take 3 start attempts.


4.2.2 During operation

Regularly carry out following checks:

- Check the controller display for normal readings.



Avoid to let the engine run out of fuel. If it happened, priming will speed up the starting.

- Check for leakage of oil, fuel or coolant.
- 
- Avoid long low-load periods (< 30%). In this case, an output drop and higher oil consumption of the engine could occur. Refer to ‘Preventing low loads’.**
- Check that the voltage between the phases is identical and that the rated current is not exceeded.
 - When single-phase loads are connected to the generator output terminals, keep all loads well-balanced.
 - If circuit breakers have tripped during operation, switch off the load and stop the generator. Check and, if necessary, decrease the load.



The generator’s doors may only remain opened for short periods during operation, to carry out checks for example.


4.2.3 Stopping




- When in MANUAL mode:
 - Switch off the load.
 - Switch off circuit breaker Q1.
 - Press the **STOP** button to stop the generator immediately after cooldown.
- When in AUTO mode:
 - Switch off the load.
 - The engine will stop when a stop command (e.g. a remote start/stop signal or set timer) is given.
- Turn starter switch S20 in position O (OFF) to shut down the voltage supply towards the Qc1103™ controller.
- Lock all doors to avoid unauthorized access.





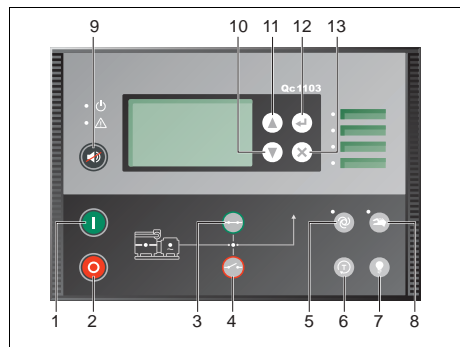

4.2.4 Setting the Qc1103™





4.2.4.1 Push button and LED functions

Following push buttons are used on the Qc1103™:




- 1  **START:** Is used to start the engine (manual running mode).
- 2  **STOP:** Is used to stop the engine (manual running mode).
- 3  **CLOSE GB:** Is used to close the generator breaker manually (only in manual running mode).

- 4  **OPEN GB:** Is used to open the generator breaker manually (only in manual running mode).
- 5  **AUTO:** Is used to put the generator in AUTO running mode.
- 6  **TEST:** Is used to put the generator in TEST running mode.
- 7  **LAMP TEST:** Is used to perform a lamp test.
- 8  **MAN:** Is used to put the generator in MANUAL/BLOCK running mode.
Press MAN **once** to activate MANUAL mode, press MAN **twice** to activate BLOCK mode.
- 9  **RESET HORN:** Is used to reset the horn relay.
Press and hold the RESET HORN button for 2 seconds to enter the alarm list.

- 10  **UP:** Is used to scroll upwards through the display information and to increase a parameter value.
- 11  **DOWN:** Is used to scroll downwards through the display information and to decrease a parameter value.
- 12  **ENTER:** Is used to enter menus and values and to acknowledge alarms.
- 13  **BACK:** Is used to leave menu's without change and to remove pop-up messages.

Following LEDs are used on the Qc1103™:

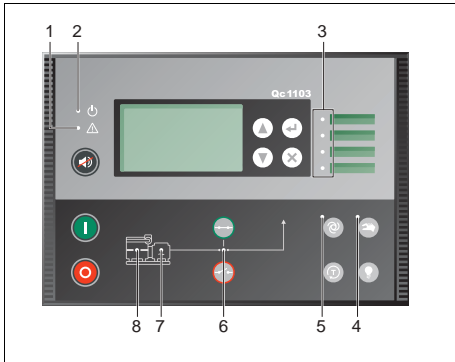

1	Alarm	LED flashing indicates that unacknowledged alarms are present. LED steady indicates that all alarms are acknowledged, but some are still present.
2	Power	LED indicates that the auxiliary supply is switched on. Green LED indicates that the controller is operational. Red LED indicates that the self-check has failed.
3	User configurable indicators	4 LEDs with selectable indication function. Selection is made using PARUS software.


4	MAN	LED steady indicates that MANUAL mode is active. LED flashing green indicates that BLOCK mode is active.
5	AUTO	LED indicates that AUTO mode is active.
6	GB on	LED indicates that the generator breaker is closed.
7	Hz/V ok	LED indicates that voltage and frequency are present and OK.
8	Run	LED indicates that running feedback is present.

4.2.4.2 Qc1103™ menu overview

The Qc1103™ display includes the menu systems listed below which can be used/viewed without password entry:

– View menu:

The view menus are the daily use menus for the operator. There are 20 configurable display views, with up to three configurable display lines in each view. View configuration is done through PARUS software.

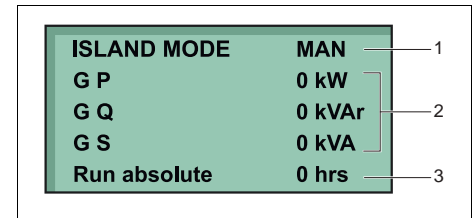

- 1 Genset mode and running mode
- 2 Measurements relating to operational status
- 3 Running hours

– Log menu:

This menu contains event, alarm and battery logs.

– Setup menu:

This menu is used for setting up the unit, and if the operator needs detailed information that is not available in the view menu system.

Changing of parameter settings is password-protected.

– Alarm list:

This list shows active acknowledged and unacknowledged alarms. Alarms can be acknowledged by pressing the **ENTER** button.

– Service menu:

This menu contains input-, output, M-Logic status and data about the unit.

It is possible to toggle between the menus, using the **UP** and **DOWN** buttons.

View examples:

The software version can be found in the Service menu:

Service menu	
Appl. Ver.:	9.90.0
Appl. Rev.:	0
Boot Ver.:	9.99.1
Boot Rev.:	0


Status, Generator P, Q and S. Run hours:

ISLAND MODE	MAN
G P	0 kW
G Q	0 kVAr
G S	0 kVA
Run absolute	0 hrs

Service timer 1 and 2. Run hours:

ISLAND MODE	MAN
Serv1	1 d 0 h
Serv2	1 d 0 h
Run absolute	0 hrs

Menu flow:

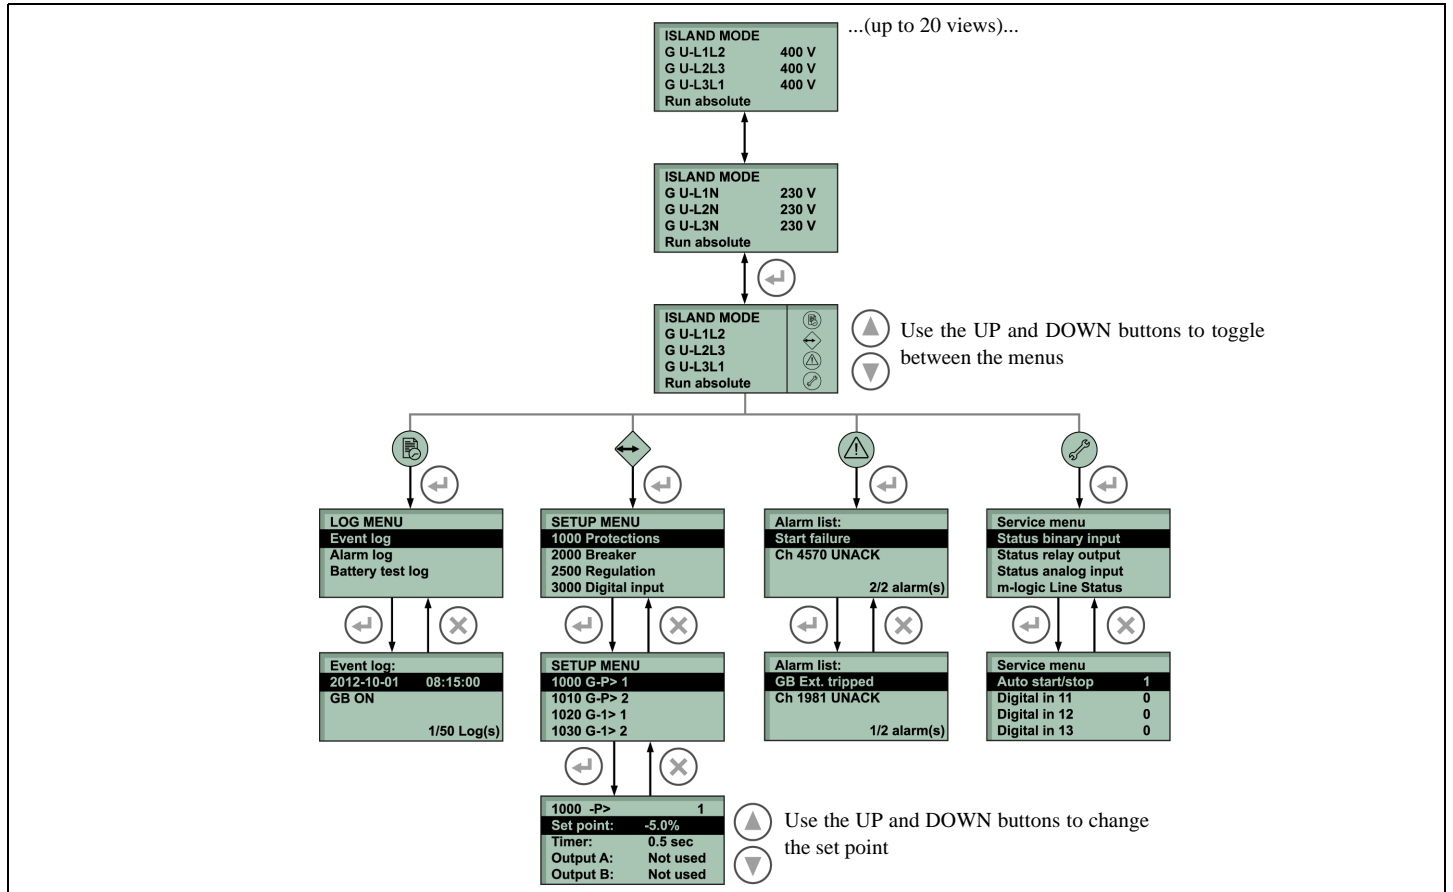

Status line text

Display	Description
BLOCK	Block mode is activated
SIMPLE TEST	Test mode is activated
FULL TEST	
SIMPLE TEST ###.#min	Test mode activated and test timer counting down
FULL TEST ###.#min	
ISLAND MAN	Genset stopped or running and no other action taking place
READY ISLAND AUTO	Genset stopped in Auto
ISLAND ACTIVE	Genset running in Auto
DG BLOCKED FOR START	Generator stopped and active alarm(s) on the generator
GB ON BLOCKED	Generator running, GB open and an active "Trip GB"alarm
SHUTDOWN OVERRIDE	The configurable input is active
ACCESS LOCK	The configurable input is activated, and the operator tries to activate one of the blocked keys.
GB TRIP EXTERNALLY	Some external equipment has tripped the breaker. An external trip is logged in the event log.
IDLE RUN	The "Idle run" function is active. The genset will not stop until a timer has expired.
IDLE RUN ###.#min	The timer in the "Idle run" function is active.
Aux. test ##.#V #####s	Battery test activated
START PREPARE	The start prepare relay is activated

Display	Description
START RELAY ON	The start relay is activated
START RELAY OFF	The start relay is deactivated during the start sequence
Hz/V OK IN ###s	The voltage and frequency on the genset is OK. When the timer runs out it is allowed to operate the generator breaker.
COOLING DOWN ###s	Cooling down period is activated.
COOLING DOWN	Cooling down period is activated and infinite. Cooling down timer is set to 0.0 s.
GENSET STOPPING	This info is shown when cooling down has finished.
EXT. STOP TIME ###s	Extended stop time. The unit will stop after a pre-programmed time of x.x s. after having received a stop signal.

Machine Verhuur Oostervolde

4.2.4.3 Running modes

The unit has three different running modes and one block mode. The different running modes are selected via the display or the PARUS software.

AUTO

In AUTO mode, the unit will operate automatically, and the operator cannot initiate any sequences manually.

TEST

When TEST mode is selected, a test sequence will start. In this mode it is possible to perform two types of tests: a Simple test or a Full test. The type of test is selected in parameter 7040.



The test will be interrupted if the mode is changed to either MANUAL or AUTO.

MANUAL

In MANUAL mode the unit will not initiate any sequences automatically. It will only initiate sequences, if external signals are given.

BLOCK

When BLOCK mode is selected, the unit is not able to initiate any sequences, e.g. the start sequence. BLOCK mode must be selected when maintenance work is carried out on the genset.



The genset will shut down if BLOCK mode is selected while the genset is running.

4.2.4.4 Application modes

Island operation

- This operation mode is selected for local/remote start applications, without the Mains (= stand-alone).
- Combined with MANUAL mode = Local Start operation.
 - The sequence is: start / close generator breaker (manually) / genset operation / open generator breaker (manually) / open generator breaker / stop.
- Combined with AUTO mode = Remote Start operation.
 - The remote start signal can be given with an external switch. Before the generator will be started, the generator breaker must be closed.
 - Installation wiring for Remote Start operation: wire the RS switch between X25.1 & X25.2.

4.2.4.5 Parameter settings

The parameter settings are pre-programmed. To change parameter settings, a password is required. Changing different parameters requires different password levels. Some parameters cannot be changed by the end-customer because of safety reasons.

The Qc1103™ provides three different password levels:


- User password
- Service password
- Master password

A parameter cannot be entered with a password that is ranking too low. But the parameter settings can be displayed without password entry.


Consult the Qc1103™ user manual for all customer level parameters, which can be accessed with the user password. In order to receive the default parameters for your unit, please contact Atlas Copco Service staff.

To change a parameter:


1. Enter the Setup menu.

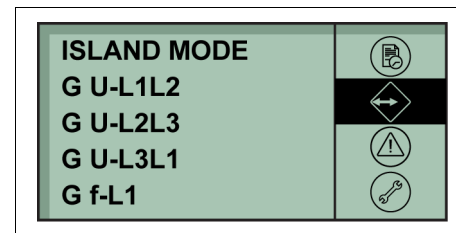

2. Press the **ENTER** button to enter the parameter setting.

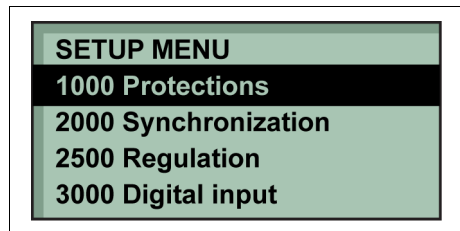

3. Select the menu group with the **ENTER** button to edit.

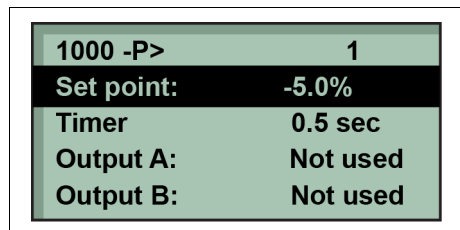

4. Enter the password.
5. Edit the set point value with the **UP** and **DOWN** buttons and save the value by pressing the **ENTER** button.

4.2.4.6 LOG list


The log is divided into three different lists:

- Event log: contains up to 50 events
- Alarm log: contains up to 30 historical alarm
- Battery test log: contains up to 52 historical battery tests

An event is e.g. closing of breaker and starting of engine. An alarm is e.g. overcurrent or high cooling water temperature. A battery test is e.g. test OK or test failed.

To enter the log list:

1. Enter the LOG MENU.
2. Select the required log list with the **UP** and **DOWN** push-buttons and select with the **ENTER** button.
3. To scroll up and down in the list, use the **UP** and **DOWN** buttons.

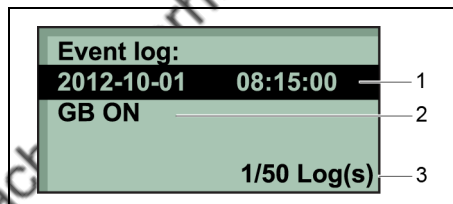

- | | | |
|---|--|----------------------------|
| 1 | | Date and time of the event |
| 2 | | Event |
| 3 | | Event number |

4.3 Operating and setting Qc2103™

4.3.1 Starting

- Switch on the battery switch, if applicable.
- Switch off circuit breaker Q1.
- Turn starter switch S20 to position I (ON) to power up the Qc2103™ controller.
- Select the desired operating mode on the Qc2103™ controller (see chapter “Running modes” on page 32 for the possible selections).
- To start-up the generator in MANUAL mode:
 - Press the **MAN** push button on the Qc2103™ controller to activate MANUAL mode.
 - Use the **START** button to start-up the generator.
 - Allow the generator to start-up till voltage and frequency are OK (**Hz/V ok** lights up).
 - Switch on circuit breaker Q1.
- To start-up the generator in AUTO mode:
 - Press the **AUTO** push button on the Qc2103™ controller to activate AUTO mode.
 - Switch on circuit breaker Q1.
 - Select the desired application mode (see chapter “Application modes” on page 42 for the possible applications).

- The generator will start-up automatically, depending on the selected application:
 - If in **Island mode**, the generator will start automatically at a start command (e.g. a remote start signal or set timer).
 - If in **AMF mode**, the generator will automatically start and switch to generator supply at a mains failure after an adjustable delay time.
 - If in **Load Take Over mode**, the generator will start automatically when a start command is given (e.g. a remote start signal or set timer) and it will switch to generator supply.

4.3.2 During operation

Regularly carry out following checks:

- Check the controller display for normal readings.



Avoid to let the engine run out of fuel. If it happened, priming will speed up the starting.

- Check for leakage of oil, fuel or coolant.



Avoid long low-load periods (< 30%). In this case, an output drop and higher oil consumption of the engine could occur. Refer to ‘Preventing low loads’.

- Check that the voltage between the phases is identical and that the rated current is not exceeded.
- When single-phase loads are connected to the generator output terminals, keep all loads well-balanced.
- If circuit breakers have tripped during operation, switch off the load and stop the generator. Check and, if necessary, decrease the load.



The generator’s doors may only remain opened for short periods during operation, to carry out checks for example.

4.3.3 Stopping


- When in MANUAL mode:
 - Switch off the load.
 - Switch off circuit breaker Q1.
 - Press the STOP button to stop the generator.
- When in AUTO mode:
 - Switch off the load.
 - If in **Island mode**, the generator stops the engine by a stop command (e.g. a remote start/stop signal or set timer).
 - If in **AMF** mode, the unit will switch back to mains supply when the mains returns. Switching back to mains supply is done when the adjusted "Mains OK delay" has expired.
 - If in **Load Take Over** mode, the unit will switch back to mains when a stop command is given (e.g. a remote start/stop signal or set timer).
- After cooldown, the generator will shut down automatically.
- Turn starter switch S20 in position O (OFF) to shut down the voltage supply towards the Qc2103™ controller.
- Lock all doors to avoid unauthorized access




Machine Verhuur Oosterwolde





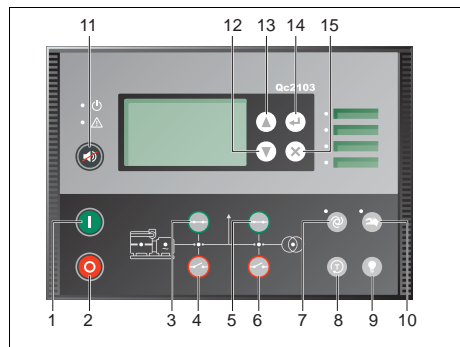


4.3.4 Setting the Qc2103™






4.3.4.1 Push button and LED functions

Following push buttons are used on the Qc2103™:




- 1  **START:** Is used to start the engine (manual running mode).
- 2  **STOP:** Is used to stop the engine (manual running mode).
- 3  **CLOSE MB:** Is used to close the mains breaker manually (only in manual running mode).

- 4  **OPEN MB:** Is used to open the mains breaker manually (only in manual running mode).
- 5  **CLOSE GB:** Is used to close the generator breaker manually (only in manual running mode).
- 6  **OPEN GB:** Is used to open the generator breaker manually (only in manual running mode).
- 7  **AUTO:** Is used to put the generator in AUTO running mode.
- 8  **TEST:** Is used to put the generator in TEST running mode.
- 9  **LAMP TEST:** Is used to perform a lamp test.
- 10  **MAN:** Is used to put the generator in MANUAL/BLOCK running mode.
Press **MAN once** to activate MANUAL mode, press **MAN twice** to activate BLOCK mode.

- 11  **RESET HORN:** Is used to reset the horn relay.
Press and hold the **RESET HORN** button for 2 seconds to enter the alarm list.
- 12  **UP:** Is used to scroll upwards through the display information and to increase a parameter value.
- 13  **DOWN:** Is used to scroll downwards through the display information and to decrease a parameter value.
- 14  **ENTER:** Is used to enter menus and values and to acknowledge alarms.
- 15  **BACK:** Is used to leave menu's without change and to remove pop-up messages.

Following LEDs are used on the Qc2103™:

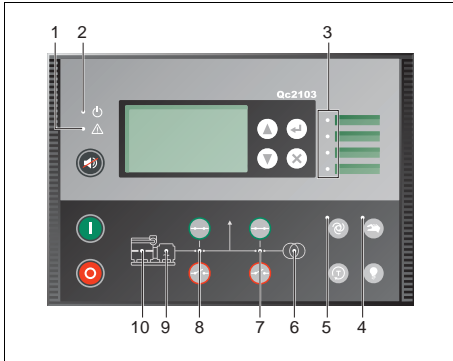

1 Alarm	LED flashing indicates that unacknowledged alarms are present. LED steady indicates that all alarms are acknowledged, but some are still present.
2 Power	LED indicates that the auxiliary supply is switched on. Green LED indicates that the controller is operational. Red LED indicates that the self-check has failed.
3 User configurable indicators	4 LEDs with selectable indication function. Selection is made using PARUS software.


4 MAN	LED steady indicates that MANUAL mode is active. LED flashing green indicates that BLOCK mode is active.
5 AUTO	LED indicates that AUTO mode is active.
6 Mains ok	LED is green if the mains is present and OK. LED is red at a mains failure. LED is flashing green when the mains returns during the "mains OK delay" time.
7 MB on	LED Indicates that the mains breaker is closed.
8 GB on	LED indicates that the generator breaker is closed.
9 Hz/V ok	LED indicates that voltage and frequency are present and OK.
10 Run	LED indicates that running feedback is present.

4.3.4.2 Qc2103™ menu overview

The Qc2103™ display includes the menu systems listed below which can be used/viewed without password entry:

– View menu:

The view menus are the daily use menus for the operator. There are 20 configurable display views, with up to three configurable display lines in each view. View configuration is done through the PARUS software.

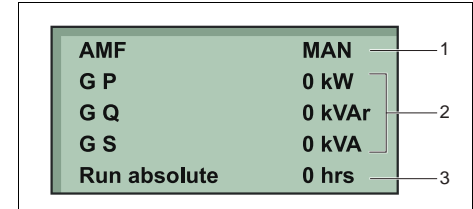

- 1** Genset mode and running mode
- 2** Measurements relating to operational status
- 3** Running hours

– Log menu:

This menu contains event, alarm and battery logs.

– Setup menu:

This menu is used for setting up the unit, and if the operator needs detailed information that is not available in the view menu system.

Changing of parameter settings is password-protected.

– Alarm list:

This list shows active acknowledged and unacknowledged alarms. Alarms can be acknowledged by pressing the **ENTER** button.

– Service menu:

This menu contains input-, output, M-Logic status and data about the unit.

It is possible to toggle between the menus, using the **UP** and **DOWN** buttons.

View examples:

The software version can be found in the Service menu:

Service menu	
Appl. Ver.:	9.90.0
Appl. Rev.:	0
Boot Ver.:	9.99.1
Boot Rev.:	0


Status, Generator P, Q and S. Run hours:

AMF	MAN
G P	0 kW
G Q	0 kVAr
G S	0 kVA
Run absolute	0 hrs

Service timer 1 and 2. Run hours:

AMF	MAN
Serv1	1 d 0 h
Serv2	1 d 0 h
Run absolute	0 hrs

Menu flow:

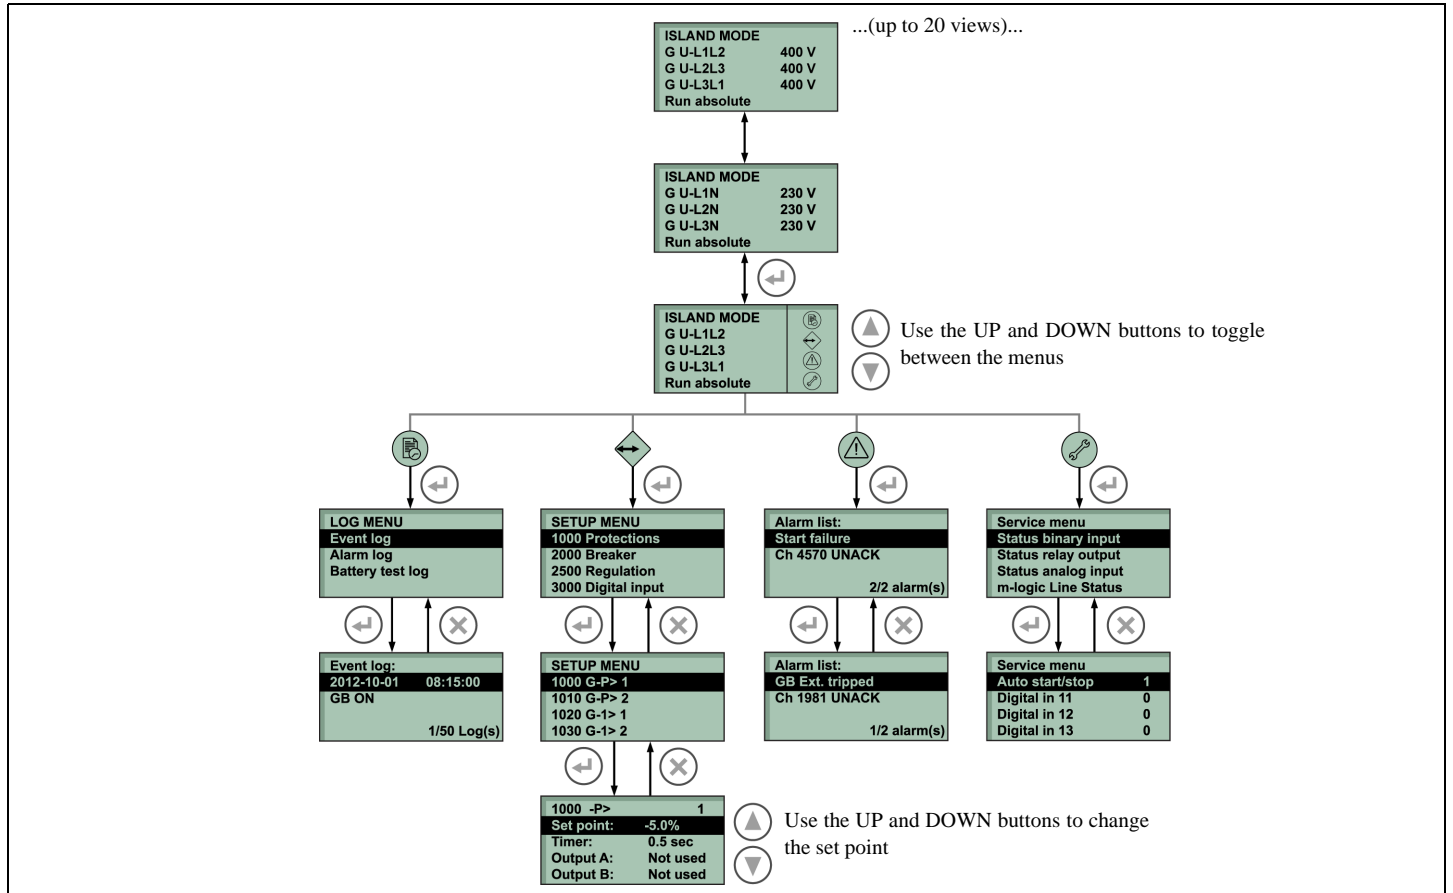

Status line text

Display	Description
BLOCK	Block mode is activated
SIMPLE TEST	Test mode is activated
FULL TEST	
SIMPLE TEST ###.#min	
FULL TEST ###.#min	Test mode activated and test timer counting down
ISLAND MAN	Genset stopped or running and no other action taking place
READY ISLAND AUTO	Genset stopped in Auto
ISLAND ACTIVE	Genset running in Auto
AMF MAN	Genset stopped or running and no other action taking place
READY AMF AUTO	Genset stopped in Auto
AMF ACTIVE	Genset running in Auto
LOAD TAKEOVER MAN	Genset stopped or running and no other action taking place
READY LTO AUTO	Genset stopped in Auto
LTO ACTIVE	Genset running in Auto
DG BLOCKED FOR START	Generator stopped and active alarm(s) on the generator
GB ON BLOCKED	Generator running, GB open and an active "Trip GB"alarm
SHUTDOWN OVERRIDE	The configurable input is active.
ACCESS LOCK	The configurable input is activated, and the operator tries to activate one of the blocked keys.
GB TRIP EXTERNALLY	Some external equipment has tripped the breaker. An external trip is logged in the event log.
MB TRIP EXTERNALLY	Some external equipment has tripped the breaker. An external trip is logged in the event log.
IDLE RUN	The "Idle run" function is active. The genset will not stop until a timer has expired.
IDLE RUN ###.#min	The timer in the "Idle run" function is active.

Display	Description
Aux. test ##.#V ####s	Battery test activated
START PREPARE	The start prepare relay is activated.
START RELAY ON	The start relay is activated.
START RELAY OFF	The start relay is deactivated during the start sequence.
MAINS FAILURE	Mains failure and mains failure timer expired.
MAINS FAILURE IN ####s	Frequency or voltage measurement is outside the limits. The timer shown is the Mains failure delay. Text in mains units.
MAINS U OK DEL ####s	Mains voltage is OK after a mains failure. The timer shown is the Mains OK delay.
MAINS f OK DEL ####s	Mains frequency is OK after a mains failure. The timer shown is the Mains OK delay.
Hz/V OK IN ####s	The voltage and frequency on the genset is OK. When the timer runs out it is allowed to operate the generator breaker.
COOLING DOWN ####s	Cooling down period is activated.
COOLING DOWN	Cooling down period is activated and infinite. Cooling down timer is set to 0.0 s.
GENSET STOPPING	This info is shown when cooling down has finished.
EXT. STOP TIME ####s	Extended stop time. The unit will stop after a pre-programmed time of x.x s. after having received a stop signal.
EXT. START ORDER	A planned AMF sequence is activated. There is no failure on the mains during this sequence.

4.3.4.3 Running modes

The unit has three different running modes and one block mode. The different running modes are selected via the display or the PARUS software.

Auto

In AUTO mode, the unit will operate automatically, and the operator cannot initiate any sequences manually.

Test

When TEST mode is selected, a test sequence will start. In this mode it is possible to perform two types of tests: a Simple test or a Full test. The type of test is selected in parameter 7040.



The test will be interrupted if the mode is changed to either MANUAL or AUTO.

Manual

In MANUAL mode the unit will not initiate any sequences automatically. It will only initiate sequences, if external signals are given.

Block

When BLOCK mode is selected, the unit is not able to initiate any sequences, e.g. the start sequence. BLOCK mode must be selected when maintenance work is carried out on the genset.



The genset will shut down if BLOCK mode is selected while the genset is running.

4.3.4.4 Application modes

Island operation

- This operation mode is selected for local/remote start applications, without the Mains (= stand-alone).
- Combined with MANUAL mode = Local Start operation.
 - The sequence is: start / close generator breaker (manually) / genset operation / open generator breaker (manually) / open generator breaker / stop.
- Combined with AUTO mode = Remote Start operation.
 - The remote start signal can be given with an external switch. Before the generator will be started, the generator breaker must be closed.
 - Installation wiring for Remote Start operation: wire the RS switch between X25.R1 & X25.R2.

Automatic Mains Failure (AMF) operation



This application is only possible in combination with the AUTO mode. If the MANUAL mode is selected the AMF operation will NOT function!

- When the Mains exceeds the defined voltage / frequency limits for a defined delay time, the generator will take over the load automatically.

- When the mains is restored within the defined limits for a defined time, the generator will unload before disconnecting and switching back to the Mains.
- The generator will then go into cooldown and stop. It will stay stand-by for the next event.
- Installation wiring for Remote Start operation: refer to the Circuit diagrams section for the correct connections.



To operate the unit in AMF mode, make sure that the PTB (Power Transfer Box) is properly installed, see page 74. Refer to the Circuit diagrams section for the correct connections.

Load Take Over (LTO) operation

- This operation mode is selected for local/remote start applications.
- Combined with MANUAL mode = Local Start operation.
 - The sequence is: start / open mains breaker contactor / close generator breaker contactor / genset operation / open generator breaker contactor / close mains breaker contactor / stop.

- Combined with AUTO mode = Remote Start operation.
 - The remote start signal can be given with an external switch. After the generator has been started, the mains breaker will open automatically and the generator breaker will close. When the start signal is removed the generator breaker will open automatically and the mains breaker will close.
 - The generator will then go into cooldown and stop.
 - Installation wiring for Remote Start operation: wire the RS switch between X25.R1 & X25.R2.



To operate the unit in LTO mode, make sure that the PTB (Power Transfer Box) is properly installed, see page 74.

Refer to the Circuit diagrams section for the correct connections.

4.3.4.5 Parameter settings

The Parameter menu's are pre-programmed.

To change parameter settings, a password is required. Changing different parameters requires different password levels. Some parameters cannot be changed by the end-customer because of safety reasons.

The Qc2103™ provides three different password levels:


- User password
- Service password
- Master password

A parameter cannot be entered with a password that is ranking too low. But the parameter settings can be displayed without password entry.


Consult the Qc2103™ user manual for all customer level parameters, which can be accessed with the user password. In order to receive the default parameters for your unit, please contact Atlas Copco Service staff.

To change a parameter:


1. Enter the Setup menu.

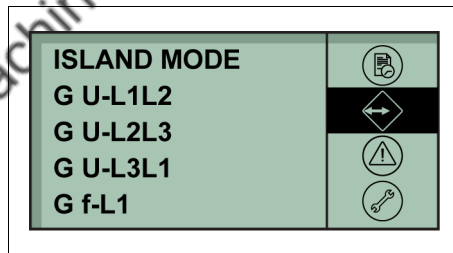

2. Press the **ENTER** button to enter the parameter setting.

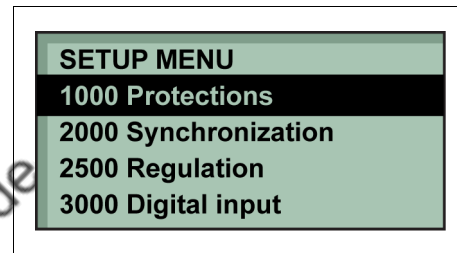

3. Select the menu group with the **ENTER** button to edit.

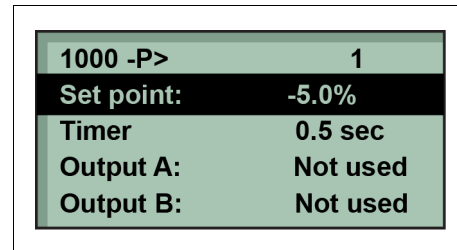

4. Enter the password.
5. Edit the set point value with the **UP** and **DOWN** buttons and save the value by pressing the **ENTER** button.

4.3.4.6 LOG list


The log is divided into three different lists:

- Event log: contains up to 50 events
- Alarm log: contains up to 30 historical alarm
- Battery test log: contains up to 52 historical battery tests

An event is e.g. closing of breaker and starting of engine. An alarm is e.g. overcurrent or high cooling water temperature. A battery test is e.g. test OK or test failed.

To enter the log list:

1. Enter the LOG MENU.
2. Select the required log list with the **UP** and **DOWN** push-buttons and select with the **ENTER** button.
3. To scroll up and down in the list, use the **UP** and **DOWN** buttons.

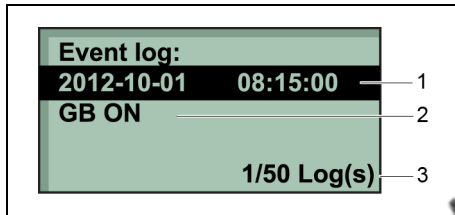

- | | | |
|---|--|----------------------------|
| 1 | | Date and time of the event |
| 2 | | Event |
| 3 | | Event number |

5 Maintenance


5.1 Maintenance schedule



Before carrying out any maintenance activity, check that the start switch is in position O and that no electrical power is present on the terminals.

Maintenance schedule	Daily	50 hrs after initial start-up	Every 250 hours	Every 500 hours	Every 1000 hours	Every 2000 hours	Yearly
Service pack	-	-	-	-	-	-	-
<p><i>For the most important subassemblies, Atlas Copco has developed service kits that combine all wear parts. These service kits offer you the benefits of genuine parts, save on administration costs and are offered at reduced price, compared to the loose components. Refer to the parts list for more information on the contents of the service kits.</i></p>							
Drain water from fuel filter	x						
Check/Fill fuel level (3)	x						
Empty air filter vacuator valves	x						
Check air intake vacuum indicators	x						
Check engine oil level (if necessary top up)	x						
Check coolant level	x						
Check control panel for alarms and warnings	x						
Check on abnormal noise	x						
Check function of coolant heater (option)				x			x
Replace air filter element (1)				x			x
Check/Replace safety cartridge					x		x
Change engine oil (2) (6)		x		x	x		x
Replace engine oil filter (2)		x		x	x		x
Replace fuel (primary) filter(s) (5)				x	x		x
Replace fuel (secondary) filter(s) (5)				x	x		x

Maintenance schedule	Daily	50 hrs after initial start-up	Every 250 hours	Every 500 hours	Every 1000 hours	Every 2000 hours	Yearly
Service pack	-	-	-	-	-	-	-
Inspect/Adjust fan/alternator belt		x	x	x	x		x
Replace fan/alternator belt					x		x
Measure alternator insulation resistance (11)					x		x
Test Earth Leakage Relay (12)				x	x		x
Check emergency stop (12)				x	x		x
Clean radiator (1)					x		x
Check for obstructions on crankcase breather system / filter and hoses	x						
Drain condensate and water from spillage-free frame or catch basin (8)				x	x		x
Check for leaks in engine-, air-, oil-, or fuel system				x	x		x
Hoses and clamps - Inspect/Replace				x	x		x
Check electrical system cables for wear					x		x
Check/Test glow plugs - grid heater					x		x
Check torque on critical bolt connections					x		x
Check electrolyte level and terminals of battery (10)				x	x		x
Analyse coolant (4) (7)				x	x		x
Check external fuel connection (option)					x		x
Grease locks and hinges				x	x		x
Check rubber flexibles (9)					x		x
Drain/Clean fuel tank water and sediment (1) (13)				x	x		x
Adjust engine inlet and outlet valves (2)		x			x		x

Maintenance schedule	Daily	50 hrs after initial start-up	Every 250 hours	Every 500 hours	Every 1000 hours	Every 2000 hours	Yearly
Service pack	-	-	-	-	-	-	-
Check fuel injectors (2)						x	
Check engine protective devices					x		x
Inspect starter motor						x	x
Inspect turbocharger						x	x
Inspect water pump						x	x
Inspect charging alternator						x	x
Inspection by Atlas Copco service technician				x	x		x
		Generators in stand-by application have to be tested on a regular basis. At least once a month the engine should run for one hour. If possible a high load (> 30%) should be applied so that the engine reaches its operating temperature.					

Maintenance schedule	Daily	50 km after initial start-up	Every 500 hours	Every 1000 hours	Every 2000 hours	Yearly
Check tyre pressure		x	x		x	x
Check tyres for uneven wear					x	x
Check torque of wheel nuts		x			x	x
Check coupling head	x				x	x
Check height of adjusting facility	x					x
Check towbar handbrake lever spring actuator, reversing lever, linkage and all movable parts for ease of movement	x	x	x		x	x
Grease coupling head, towbar bearings at the housing of the overrun brake		x			x	x
Check brake system (if installed) and adjust if necessary		x			x	x
Oil or grease brake lever and moving parts such as bolts and joints		x			x	x
Grease sliding points on height adjusting parts					x	x
Check safety cable for damage					x	x
Check Bowden cable on height adjustable connection device for damage					x	x
Lubricate torsion bar axle trailing arm					x	x
Check brake lining wear						x
Change wheel hub bearing grease						x
Check/Adjust lateral play of wheel bearing (conventional bearing)			x		x	x

Notes:

In highly dusty environments, these service intervals do not apply. Check and/or replace filters and clean radiator on a regular basis.

- (1) More frequently when operating in a dusty environment.
- (2) Refer to engine operation manual.
- (3) After a days work.
- (4) Yearly is only valid when using PARCOOL. Change coolant every 5 years.
- (5) Gummed or clogged filters means fuel starvation and reduced engine performance. Reduce service interval in heavy duty application.
- (6) See section “Engine oil specifications”.
- (7) The following part numbers can be ordered from Atlas Copco to check on inhibitors and freezing points:
 - 2913 0028 00: refractometer
 - 2913 0029 00: pH meter
- (8) See section “Before starting”.
- (9) Replace all rubber flexibles every 5 years, according to DIN20066.
- (10) See section “Battery care”.
- (11) See section “Measuring the alternator insulation resistance”.
- (12) The function of this protection should be tested minimum on every new installation.

- (13) Water in fuel tank can be detected by means of 2914 8700 00. Drain fuel tank when water is detected.

5.1.1 Use of maintenance schedule

The maintenance schedule contains a summary of the maintenance instructions. Read the respective section before taking maintenance measures.

When servicing, replace all disengaged packing, e.g. gaskets, O-rings, washers.

For engine maintenance refer to Engine Operation Manual.

The maintenance schedule has to be seen as a guideline for units operating in a dusty environment typical to generator applications. Maintenance schedule can be adapted depending on application, environment and quality of maintenance.

5.1.2 Use of service packs

Service Packs include all genuine parts needed for normal maintenance of both generator and engine. Service Packs minimize downtime and keep your maintenance budget low.

The order number of the Service Packs are listed in the Atlas Copco Parts list (ASL). Order Service Packs at your local Atlas Copco dealer.

5.2 Preventing low loads

5.2.1 General

All engine parts are designed with tolerances to allow work under full load conditions. When operating at low load, these tolerances allow more lube oil to pass between valve guides, stems, liners and pistons due to the lower engine temperatures.

Lower combustion pressure has an influence on the piston ring operation and the combustion temperature. Low boost pressure will cause oil leakage over the turbo shaft seal.

5.2.2 Risks of low load operation

- Cylinder glazing: the cylinder bore troughs become filled with lacquer, displacing oil and thus preventing correct ring lubrication.
- Bore polishing: the bore surface becomes polished, all peaks and most troughs become worn away, also preventing correct ring lubrication.
- Heavy carbon buildup: on pistons, piston ring grooves, valves and turbo charger. Carbon buildup on pistons can cause seizure when later operating at full load.
- High oil consumption: prolonged no-load/low load operation of the engine may cause it to blue/gray smoke at low rpm with an associated increase in oil consumption

- Low combustion temperature: this will result in insufficiently burnt fuel, which will cause diluting of the lube oil. Also, unburnt fuel and lube oil can enter the exhaust manifold and eventually leak out through joints in the exhaust manifold.
- Risk for fire

5.2.3 Best practices

Reduce the low load periods to a minimum. This should be achieved by adequately sizing the unit for the application.

It is recommended that a unit is always used with a load > 30% of nominal. Corrective actions should be taken if due to circumstances this minimum load capacity cannot be obtained.

Operate the unit at full load capacity after any low load operating period. Therefore, connect the unit periodically to a load bank. Increase the load in steps of 25% every 30 minutes and allow the unit to run for 1 hour in full load condition. Gradually return the unit to the operating load.

The interval between load bank connections may vary according to the conditions present on site and the amount of load. However, a rule of thumb is to connect a unit to a load bank after every maintenance operation.

If the engine is installed as a stand-by generator, then it should be operated at full load for at least 4 hrs/year. If periodic tests are performed on a regular basis without load, these should not exceed 10 min. Full load tests help to clean out the carbon deposits in the engine and exhaust system and evaluate the engine's performance. To avoid potential problems during the test, load should be gradually increased.

In rental applications (where the load is often an unknown factor) units should be tested at full load after each rental job or every 6 months, whichever comes first.

For more info, please contact your Atlas Copco Service Center.



When a failure occurs and is deemed due to low load operation, the repairs fall outside warranty coverage.

5.3 Alternator maintenance procedures

5.3.1 Measuring the alternator insulation resistance

A 500 V megger is required to measure the alternator insulation resistance.

If the N-terminal is connected to the earthing system, it must be disconnected from the earth terminal. Disconnect the AVR.

Connect the megger between the earth terminal and terminal L1 and generate a voltage of 500 V. The scale must indicate a resistance of at least 5 MΩ.

Refer to the alternator operating and maintenance instructions for more details.

5.4 Engine maintenance procedures

Refer to the engine's operator manual for full maintenance, including instructions for changing the oil and coolant and replacing the fuel, oil and air filters.

5.4.1 Engine oil level check

Consult the Engine Operation Manual for the oil specifications, viscosity recommendations and oil change intervals.

For intervals, see section "Maintenance schedule" on page 45.

Check engine oil level according to the instructions in the Engine Operation Manual and if necessary top up with oil.

5.4.2 Coolant check

5.4.2.1 Monitoring coolant condition

In order to guarantee the lifetime and quality of the product, thus to optimise engine protection, regular coolant-condition-analysis is advisable.

The quality of the product can be determined by three parameters.

Visual check

- Verify the outlook of the coolant regarding colour and make sure that no loose particles are floating around.



**Long service intervals
5-year drain interval to minimize
service costs (when used in
accordance with the instructions).**

pH measurement

- Check the pH value of the coolant using a pH-measuring device.
- The pH-meter can be ordered from Atlas Copco with part number 2913 0029 00.
- Typical value for EG = 8.6.
- If the pH-level is below 7 or above 9.5, the coolant should be replaced.

Glycol concentration measurement

- To optimise the unique engine protection features of the PARCOOL EG the concentration of the Glycol in the water should be always above 33 vol.%.
- Mixtures with more than 68 vol.% mix ratio in water are not recommended, as this will lead to high engine operating temperatures.
- A refractometer can be ordered from Atlas Copco with part number 2913 0028 00.



In case of a mix of different coolant products this type of measurement might provide incorrect values.

5.4.2.2 Topping up of coolant

- Verify if the engine cooling system is in a good condition (no leaks, clean,...).
- Check the condition of the coolant.
- If the condition of the coolant is outside the limits, the complete coolant should be replaced (see section "Replacing the coolant").
- Always top-up with PARCOOL EG.
- Topping up the coolant with water only, changes the concentration of additives and is therefore not allowed.

5.4.2.3 Replacing the coolant

Drain

- Completely drain the entire cooling system.
- Used coolant must be disposed or recycled in accordance with laws and local regulations.

Flush

- Flush twice with clean water. Used coolant must be disposed or recycled in accordance with laws and local regulations.
- From the Atlas Copco Instruction book, determine the amount of PARCOOL EG required and pour into the radiator top tank.
- It should be clearly understood that the risk for contamination is reduced in case of proper cleaning.
- In case a certain content of 'other' coolant remains in the system, the coolant with the lowest properties influences the quality of the 'mixed' coolant.

Fill

- To assure proper operation and the release of trapped air, run the engine until normal engine operation temperature is reached. Turn off the engine and allow to cool.
- Recheck coolant level and add if necessary.

5.5 Adjustments and service procedures

5.5.1 Battery care



Before handling batteries, read the relevant safety precautions and act accordingly.

If the battery is still dry, it must be activated as described in section "Activating a dry-charged battery".

The battery must be in operation within 2 months from being activated; if not, it needs to be recharged first.

5.5.1.1 Electrolyte



Read the safety instructions carefully.

Electrolyte in batteries is a sulphuric acid solution in distilled water.

The solution must be made up before being introduced into the battery.

5.5.1.2 Activating a dry-charged battery

- Take out the battery.
- Battery and electrolyte must be at equal temperature above 10°C.
- Remove cover and/or plug from each cell.
- Fill each cell with electrolyte until the level reaches 10 to 15 mm above the plates, or to the level marked on the battery.

- Rock the battery a few times so that possible air bubbles can escape; wait 10 minutes and check the level in each cell once more; if required, add electrolyte.
- Refit plugs and/or cover.
- Place the battery in the generator.

5.5.1.3 Recharging a battery

Before and after charging a battery, always check the electrolyte level in each cell; if required, top up with distilled water only. When charging batteries, each cell must be open, i.e. plugs and/or cover removed.



Use a commercial automatic battery charger according to its manufacturer's instructions.

Apply with preference the slow charging method and adjust the charge current according to the following rule of thumb: battery capacity in Ah divided by 20 gives safe charging current in Amp.

5.5.1.4 Make-up distilled water

The amount of water evaporating from batteries is largely dependant on the operating conditions, i.e. temperatures, number of starts, running time between start and stop, etc...

If a battery starts to need excessive make-up water, this points to overcharging. Most common causes are high temperatures or a too high voltage regulator setting.

If a battery does not need any make-up water at all over a considerable time of operation, an undercharged battery condition may be caused by poor cable connections or a too low voltage regulator setting.

5.5.1.5 Periodic battery service

- Keep the battery clean and dry.
- Keep the electrolyte level at 10 to 15 mm above the plates or at the indicated level; top up with distilled water only. Never overfill, as this will cause poor performance and excessive corrosion.
- Record the quantity of distilled water added.
- Keep the terminals and clamps tight, clean, and lightly covered with petroleum jelly.
- Carry out periodic condition tests. Test intervals of 1 to 3 months, depending on climate and operating conditions, are recommended.
- If doubtful conditions are noticed or malfunctions arise, keep in mind that the cause may be in the electrical system, e.g. loose terminals, voltage regulator maladjusted, poor performance of generator, etc...

5.6 Engine consumable specifications

5.6.1 Engine fuel specifications

For fuel specifications, please contact your Atlas Copco Customer Center.

5.6.2 Engine oil specifications



It is strongly recommended to use Atlas Copco branded lubrication oils.

High-quality, mineral, hydraulic or synthesized hydrocarbon oil with rust and oxidation inhibitors, anti-foam and anti-wear properties is recommended. The viscosity grade should correspond to the ambient temperature and ISO 3448, as follows:

Engine	Type of lubricant
between -10°C and 50°C	PAROIL E or PAROIL E Mission Green
between -25°C and 50°C	PAROIL Extra



Never mix synthetic with mineral oil.

When changing from mineral to synthetic oil (or the other way around), you will need to do an extra rinse.

After doing the complete change procedure to synthetic oil, run the unit for a few minutes to allow good and complete circulation of the synthetic oil. Then drain the synthetic oil again and fill again with new synthetic oil. To set correct oil levels, proceed as in normal instruction.

Specifications PAROIL

PAROIL from Atlas Copco is the ONLY oil tested and approved for use in all engines built into Atlas Copco compressors and generators.

Extensive laboratory and field endurance tests on Atlas Copco equipment have proven PAROIL to match all lubrication demands in varied conditions. It meets stringent quality control specifications to ensure your equipment will run smoothly and reliably.

The quality lubricant additives in PAROIL allow for extended oil change intervals without any loss in performance or longevity.

PAROIL provides wear protection under extreme conditions. Powerful oxidation resistance, high chemical stability and rust-inhibiting additives help reduce corrosion, even within engines left idle for extended periods.

PAROIL contains high quality anti-oxidants to control deposits, sludge and contaminants that tend to build up under very high temperatures.

PAROIL's detergent additives keep sludge forming particles in a fine suspension instead of allowing them to clog your filter and accumulate in the valve/rocker cover area.

PAROIL releases excess heat efficiently, whilst maintaining excellent bore-polish protection to limit oil consumption.

PAROIL has an excellent Total Base Number (TBN) retention and more alkalinity to control acid formation.

PAROIL prevents Soot build-up.

PAROIL is optimized for the latest low emission EURO -3 & -2, EPA TIER II & III engines running on low sulphur diesel for lower oil and fuel consumption.

PAROIL Extra

PAROIL Extra is a synthetic ultra high performance diesel engine oil with a high viscosity-index. Atlas Copco PAROIL Extra is designed to provide excellent lubrication from start-up in temperatures as low as -25°C (-13°F).

	Litre	US gal	Imp gal	cu.ft	Order number
can	5	1.3	1.1	0.175	1630 0135 00
can	20	5.3	4.4	0.7	1630 0136 00

PAROIL E

PAROIL E is a mineral based high performance diesel engine oil with a high viscosity-index. Atlas Copco PAROIL E is designed to provide a high level of performance and protection in standard ambient conditions as from -10°C (14°F).

	Litre	US gal	Imp gal	cu.ft	Order number
can	5	1.3	1.1	0.175	1615 5953 00
can	20	5.3	4.4	0.7	1615 5954 00
barrel	209	55.2	46	7.32	1615 5955 00
barrel	1000	264	220	35	1630 0096 00

PAROIL E Mission Green

PAROIL E Mission Green is a mineral based high performance diesel engine oil with a high viscosity-index. Atlas Copco PAROIL E Mission Green is designed to provide a high level of performance and protection in standard ambient conditions as from -10°C (14°F).

	Litre	US gal	Imp gal	cu.ft	Order number
can	5	1.3	1.1	0.175	1630 0471 00
can	20	5.3	4.4	0.7	1630 0472 00
barrel	209	55.2	46	7.32	1630 0473 00

5.6.3 Engine coolant specifications



Never remove the cooling system filler cap while coolant is hot.

The system may be under pressure. Remove the cap slowly and only when coolant is at ambient temperature. A sudden release of pressure from a heated cooling system can result in personal injury from the splash of hot coolant. It is strongly recommended to use Atlas Copco branded coolant.

The use of the correct coolant is important for good heat transfer and protection of liquid-cooled engines. Coolants used in these engines must be mixtures of good quality water (distilled or de-ionised), special coolant additives and if necessary freeze protection. Coolant that is not to manufacturer's specification will result in mechanical damage of the engine.

The freezing point of the coolant must be lower than the freezing point that can occur in the area. The difference must be at least 5°C. If the coolant freezes, it may crack the cylinder block, radiator or coolant pump.

Consult the engine's operation manual and follow the manufacturer's directions.



Never mix different coolants and mix the coolant components outside the cooling system.

Specifications PARCOOL EG

PARCOOL EG is the only coolant that has been tested and approved by all engine manufacturers currently in use in Atlas Copco compressors and generators.

Atlas Copco's PARCOOL EG extended life coolant is the new range of organic coolants purpose designed to meet the needs of modern engines. PARCOOL EG can help prevent leaks caused by corrosion. PARCOOL EG is also fully compatible with all sealants and gasket types developed to join different materials used within an engine.

PARCOOL EG is a ready to use Ethylene Glycol based coolant, premixed in an optimum 50/50 dilution ratio, for antifreeze protection guaranteed to -40°C.

Because PARCOOL EG inhibits corrosion, deposit formation is minimized. This effectively eliminates the problem of restricted flow through the engine coolant ducts and the radiator, minimizing the risk for engine overheating and possible failure.

It reduces water pump seal wear and has excellent stability when subjected to sustained high operating temperatures.

PARCOOL EG is free of nitride and amines to protect your health and the environment. Longer service life reduces the amount of coolant produced and needing disposal to minimise environmental impact.

	Litre	US gal	Imp gal	cu.ft	Order number
can	5	1.3	1.1	0.175	1604 5308 00
can	20	5.3	4.4	0.7	1604 5307 01
barrel	210	55.2	46	7.35	1604 5306 00

To ensure protection against corrosion, cavitation and formation of deposits, the concentration of the additives in the coolant must be kept between certain limits, as stated by the manufacturer's guidelines. Topping up the coolant with water only, changes the concentration and is therefore not allowed.

Liquid-cooled engines are factory-filled with this type of coolant mixture.

6 Checks and trouble shooting



Never perform a test run with connected power cables. Never touch an electrical connector without a voltage check.

When a failure occurs, always report what you experienced before, during and after the failure. Information with regard to the load (type, size, power factor, etc.), vibrations, exhaust gas colour, insulation check, odours, output voltage, leaks and damaged parts, ambient temperature, daily and normal maintenance and altitude might be helpful to quickly locate the problem. Also report any information regarding the humidity and location of the generator (e.g. close to sea).

6.1 Engine troubleshooting

The table below gives an overview of the possible engine problems and their possible causes.

The starter motor turns the engine too slowly

- Battery capacity too low.
- Bad electrical connection.
- Fault in starter motor.
- Wrong grade of lubricating oil.

The engine does not start or is difficult to start

- Starter motor turns engine too slowly.
- Fuel tank empty.
- Fault in fuel control solenoid
- Restriction in a fuel pipe.
- Fault in fuel lift pump.
- Dirty fuel filter element.
- Air in fuel system.
- Fault in atomisers.
- Cold start system used incorrectly.
- Fault in cold start system.
- Restriction in fuel tank vent.
Wrong type or grade of fuel used.
- Restriction in exhaust pipe.

Not enough power

- Restriction in a fuel pipe.
- Fault in fuel lift pump.
- Dirty fuel filter element.
- Restriction in air filter/cleaner or induction system.
- Air in fuel system.
- Fault in atomisers or atomisers of an incorrect type.
- Restriction in fuel tank vent.
- Wrong type or grade of fuel used.
- Restricted movement of engine speed control.
- Restriction in exhaust pipe.
- Engine temperature is too high.
- Engine temperature is too low.

Misfire

- Restriction in a fuel pipe.
- Fault in fuel lift pump.
- Dirty fuel filter element.
- Air in fuel system.
- Fault in atomisers or atomisers of an incorrect type.
- Fault in cold start system.
- Engine temperature is too high.
- Incorrect valve tip clearances.

The pressure of the lubricating oil is too low

- Wrong grade of lubricating oil.
- Not enough lubricating oil in sump.
- Defective gauge.
- Dirty lubricating oil filter element.

High fuel consumption

- Restriction in air filter/cleaner or induction system.
- Fault in atomisers or atomisers of an incorrect type.
- Fault in cold start system.
- Wrong type or grade of fuel used.
- Restricted movement of engine speed control.
- Restriction in exhaust pipe.
- Engine temperature is too low.
- Incorrect valve tip clearances.

Black exhaust smoke

- Restriction in air filter/cleaner or induction system.
- Fault in atomisers or atomisers of an incorrect type.
- Fault in cold start system.
- Wrong type or grade of fuel used.
- Restriction in exhaust pipe.
- Engine temperature is too low.

- Incorrect valve tip clearances.
- Engine overload.

Blue or white exhaust smoke

- Wrong grade of lubricating oil.
- Fault in cold start system.
- Engine temperature is too low.

The engine knocks

- Fault in fuel lift pump.
- Fault in atomisers or atomisers of an incorrect type.
- Fault in cold start system.
- Wrong type or grade of fuel used.
- Engine temperature is too high.
- Incorrect valve tip clearances.

The engine runs erratically

- Fault in fuel control.
- Restriction in a fuel pipe.
- Fault in fuel lift pump.
- Dirty fuel filter element.
- Restriction in air filter/cleaner or induction system.
- Air in fuel system.
- Fault in atomisers or atomisers of an incorrect type.

- Fault in cold start system.
- Restriction in fuel tank vent.
- Restricted movement of engine speed control.
- Engine temperature is too high.
- Incorrect valve tip clearances.

Vibration

- Fault in atomisers or atomisers of an incorrect type.
- Restricted movement of engine speed control.
- Engine temperature is too high.
- Fan damaged.
- Fault in engine mounting or flywheel housing.

The pressure of the lubricating oil is too high

- Wrong grade of lubricating oil.
- Defective gauge.

The engine temperature is too high

- Restriction in air filter/cleaner or induction system.
- Fault in atomisers or atomisers of an incorrect type.
- Fault in cold start system.
- Restriction in exhaust pipe.
- Fan damaged.
- Too much lubricating oil in sump.
- Restriction in air or coolant passages of radiator.

Crankcase pressure

- Restriction in breather pipe.
- Vacuum pipe leaks or fault in exhaust.

Bad compression

- Restriction in air filter/cleaner or induction system.
- Incorrect valve tip clearances.

The engine starts and stops

- Dirty fuel filter element.
- Restriction in air filter/cleaner or induction system.
- Air in fuel system.

The engine shuts down after approx. 15 sec.

- Bad connection towards oil pressure switch/ coolant temperature switch

Machine Verhuur Oosterwolde

6.2 Alternator troubleshooting

<i>Symptom</i>	<i>Possible cause</i>	<i>Corrective action</i>
<i>Alternator gives 0 Volt</i>	Blown fuse. No residual voltage.	Replace fuse. Excite the alternator by applying a 12V battery voltage with a 30 Ω resistor in series on the + and - terminals of the electronic regulator, respecting the polarities.
<i>After being excited the alternator still gives 0 Volt.</i>	Connections are interrupted.	Check connection cables, measure winding resistance and compare with values mentioned in the alternator manual.
<i>Low voltage at no load</i>	Voltage potentiometer out of setting. Intervention of protection. Winding failure.	Reset voltage. Check frequency/voltage regulator. Check windings.
<i>High voltage at no load</i>	Voltage potentiometer out of setting. Failed regulator.	Reset voltage. Substitute regulator.
<i>Lower than rated voltage at load</i>	Voltage potentiometer out of setting. Intervention by protection. Failed regulator. Rotating bridge failure.	Reset voltage potentiometer. Current too high, power factor lower than 0.8; speed lower than 10% of rated speed. Substitute regulator. Check diodes, disconnect cables.
<i>Higher than rated voltage at load</i>	Voltage potentiometer out of setting. Failed regulator.	Reset voltage potentiometer. Substitute regulator.
<i>Unstable voltage</i>	Speed variation in engine. Regulator out of setting.	Check regularity of rotation. Regulate stability of regulator by acting on STABILITY potentiometer.

6.3 Solving controller alarms

6.3.1 Qc1103™ and Qc2103™ alarms and remedies


6.3.1.1 Alarm handling

When an alarm occurs, the unit will automatically go to the alarm list and display the alarm. The alarm LED will be flashing.

If reading of the alarms is not desired, use the **BACK** push button to exit the alarm list. To enter the alarm list later, press the **RESET HORN** push button for 2 seconds to jump directly to the alarm list reading.

The alarm list contains both acknowledged and unacknowledged alarms, provided that they are still active (i.e. the alarm condition is still present). Once an alarm is acknowledged and the condition has disappeared, the alarm will no longer be displayed in the alarm list. This means that if there are no alarms, the alarm list will be empty.

This display example below indicates an unacknowledged alarm. The display can show only one alarm at a time. Therefore, all other alarms are hidden.

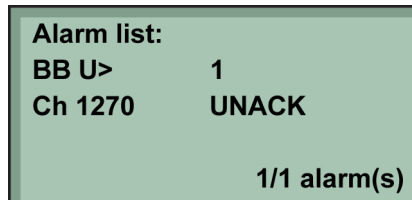

Alarm list:
BB U> 1
Ch 1270 UNACK

1/1 alarm(s)

To see the other alarms, use the **UP** and **DOWN** push buttons to scroll in the display.

To acknowledge an alarm press the **ENTER** button.

6.3.1.2 Fail classes

All the activated alarms of the module are configured with a fail class. The fail class defines the category of the alarm and the subsequent action. A fail class can be selected for each alarm function either via the display or the PC software.

7 different fail classes can be used:

Engine running:

- **Block:** Alarm Horn Relay, Alarm Display.
- **Warning:** Alarm Horn Relay, Alarm Display.
- **Trip of GB:** Alarm Horn Relay, Alarm Display, GB Trip.
- **Trip & Stop:** Alarm Horn Relay, Alarm Display, GB Trip, Genset cooling down, Genset stop.
- **Shutdown:** Alarm Horn Relay, Alarm Display, GB Trip, Genset stop.
- **Trip of MB:** Alarm Horn Relay, Alarm Display, MB Trip.
- **Trip of MB/GB:** Alarm Horn Relay, Alarm Display, (GB Trip), MB Trip.


Engine stopped:

- **Block:** Block engine start.
- **Warning:** -
- **Trip of GB:** Block engine start, Block GB sequence.
- **Trip & Stop:** Block engine start, Block GB sequence.
- **Shutdown:** Block engine start, Block GB sequence.
- **Trip of MB:** Block MB sequence.
- **Trip of MB/GB:** (Block engine start), Block MB sequence, (Block GB sequence).

In order to select when the alarms are to be active, a configurable inhibit setting for each alarm has been made. The inhibit functionality is only available via the PARUS software



6.3.1.3 Solving alarms

This is the described menu flow for solving alarms:

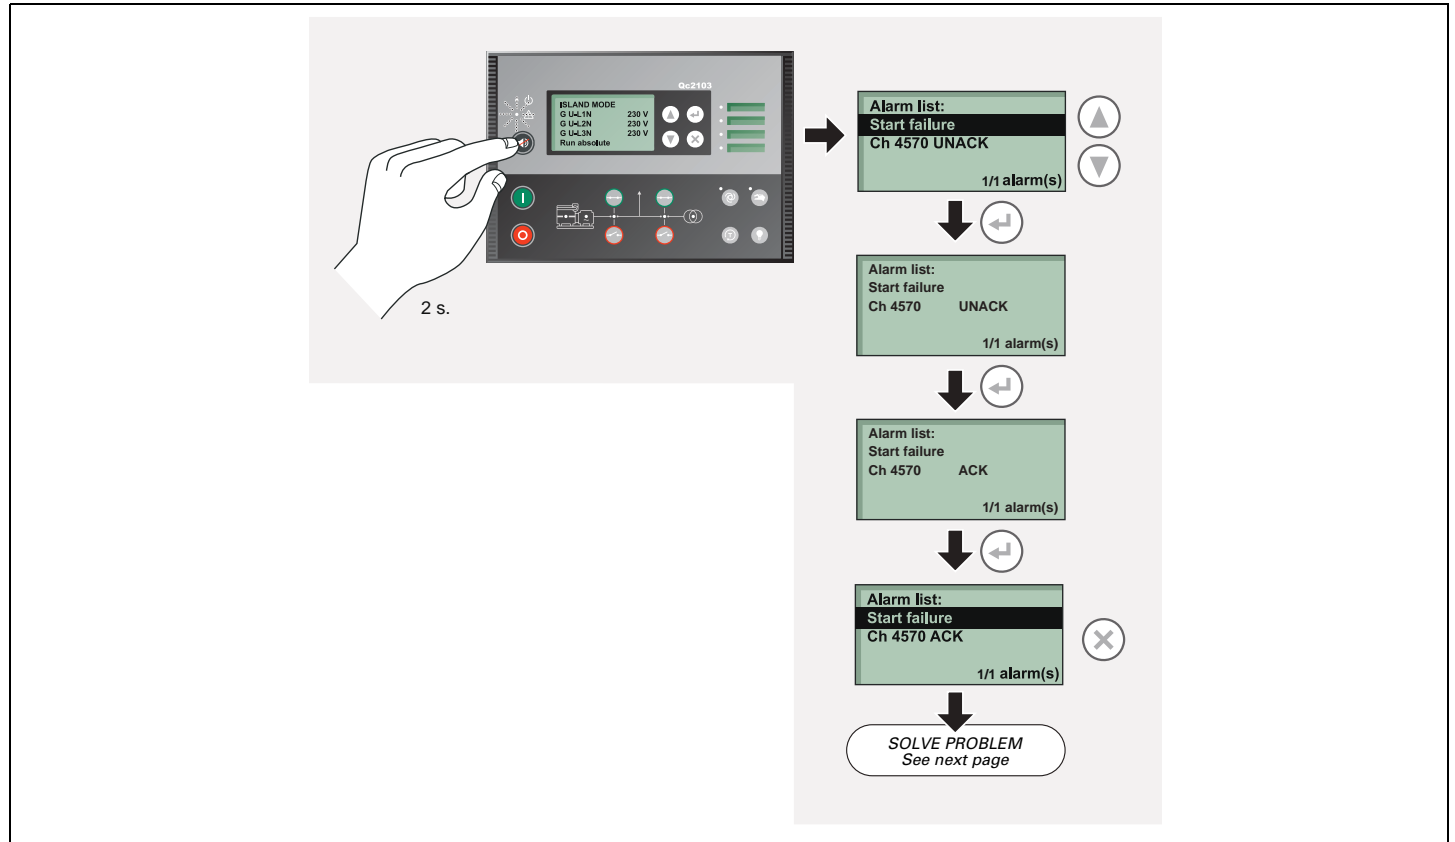

Solving problems

The troubleshooting table below shows how to solve problems causing controller alarms. It uses two common problems as an example.
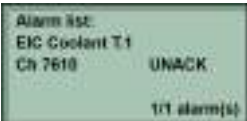
<i>Alarm display</i>	<i>Symptom</i>	<i>Possible cause</i>	<i>Corrective action</i>
 <p>Alarm list: EIC Coolant T.1 Ch 7610 UNACK 1/1 alarm(s)</p>	<i>High coolant temperature</i>	Sensor broken	Replace sensor.
		Not enough coolant	Fill coolant till appropriate level. Check for leaks.
		Obstructed airflow	Check air inlets / outlet. Clean radiator.
		Bad connection	Check wiring.
 <p>Alarm list: EIC Oil pres. 1 Ch 7630 UNACK 1/1 alarm(s)</p>	<i>Low oil pressure</i>	Not enough oil	Fill oil till appropriate level. Check for leaks.
		Sensor broken	Replace sensor.
		Oil sump broken	Check or contact Atlas Copco.
		Bad connection	Check wiring.

7 Storage of the generator

7.1 Storage

- Store the generator in a dry, frost-free room which is well ventilated.
- Run the engine regularly, e.g. once a week, until it is warmed up. If this is impossible, extra precautions must be taken:
 - Consult the engine's operator manual.
 - Remove the battery. Store it in a dry, frost-free room. Keep the battery clean and its terminals lightly covered with petroleum jelly. Recharge the battery regularly.
 - Clean the generator and protect all electrical components against moisture.
 - Place silica gel bags, VCI paper (Volatile Corrosion Inhibitor) or another drying agent inside the generator and close the doors.
 - Stick sheets of VCI paper with adhesive tape on the bodywork to close off all openings.
 - Wrap the generator, except the bottom, with a plastic bag.

7.2 Preparing for operation after storage

Before operating the generator again, remove the wrapping, VCI paper and silica gel bags and check the generator thoroughly (go through the checklist "Before starting" on page 24).

- Consult the engine's operator manual.
- Check that the insulation resistance of the generator exceeds 5 M Ω .
- Replace the fuel filter and fill the fuel tank. Vent the fuel system.
- Reinstall and connect the battery, if necessary after being recharged.
- Submit the generator to a test run.

8 Disposal

8.1 General

When developing products and services, Atlas Copco tries to understand, address, and minimize the negative environmental effects that the products and services may have, when being manufactured, distributed, and used, as well as at their disposal.

Recycling and disposal policy are part of the development of all Atlas Copco products. Atlas Copco company standards determine strict requirements.

Selecting materials the substantial recyclability, the disassembly possibilities and the separability of materials and assemblies are considered as well as the environmental perils and dangers to health during the recycling and disposal of the unavoidable rates of not recyclable materials.

Your Atlas Copco generator consists for the most part of metallic materials, that can be remelted in steelworks and smelting works and that is therefore almost infinite recyclable. The plastic used is labelled; sorting and fractioning of the materials for recycling in the future is foreseen.



This concept can only succeed with your help. Support us by disposing professionally. By assuring a correct disposal of the product you help to prevent possible negative consequences for environment and health, that can occur with an inappropriate waste handling.

Recycling and re-usage of material helps to preserve natural resources.

8.2 WEEE

DIRECTIVE 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL

on waste electrical and electronic equipment (WEEE)

This equipment falls under the provisions of the European Directive 2012/19/EU on waste electrical and electronic appliances (WEEE) and may not be disposed as unsorted waste

The equipment is labelled in accordance with the European Directive 2012/19/EU with the crossed-out wheellie bin symbol.



At the end of life-time of the electric and electronic equipment (EEE) it must be taken to separate collection.

For more information check with your local waste authority, customer center or distributor.

8.3 Disposal of materials

Dispose contaminated substances and material separately, according to local applicable environmental legislation.

Before dismantling a machine at the end of its operating lifetime drain all fluids and dispose of according the applicable local disposal regulations.

Remove the batteries. Do not throw batteries into the fire (explosion risk) or into the residual waste. Separate the machine into metal, electronics, wiring, hoses, insulation and plastic parts.

Dispose all components according to the applicable disposal regulations.

Remove spilled fluid mechanically; pick up the rest with absorbing agent (for example sand, sawdust) and dispose it according the applicable local disposal regulations. Do not drain into the sewage system or surface water.

Machine Verhuur Oosterwolde

9 Options available for QAS 14 and QAS 20 units

9.1 Circuit diagrams

The engine control circuit diagrams and the power circuit diagrams for the standard QAS 14-20 units, for the units with options and for the units with combined options are:

Power circuit

<i>Unit</i>	<i>Circuit</i>
QAS 14-20 Kd	9822 0992 65
QAS 14-20 Kd - 1ph	9822 0992 66
QAS 14-20 Kd - 2V-50Hz	9822 0992 67

Engine circuit

<i>Unit</i>	<i>Circuit</i>
QAS 14-20 Kd	9822 0992 77

Controller circuit

<i>Unit</i>	<i>Circuit</i>
QAS 14-20 Kd Qc1103™	1636 0039 95
QAS 14-20 Kd Qc2103™	1636 0036 31

9.2 Overview of the electrical options

The following electrical options are available:

- Automatic battery charger
- Battery switch
- Engine coolant heater
- Outlet sockets (S) - 3-phase
- Outlet sockets (S) for Single phase option
- Single phase
- Dual voltage (2V)
- IT-relay
- “Electricité de France” (EDF)
- Power Transfer Box (PTB)
- Spillage free liquid sensor

9.3 Description of the electrical options


9.3.1 Automatic battery charger



The automatic battery charger is standard on units with Qc2103™ controller.

The 5 Amp battery chargers have been designed to be permanently connected to a battery, keeping it charged to maximum capacity. The charger will continue to operate during cranking and running. It can accept multiple AC voltage connections.

The LED indicator on the front shows when the charger is in a normal or overload condition.

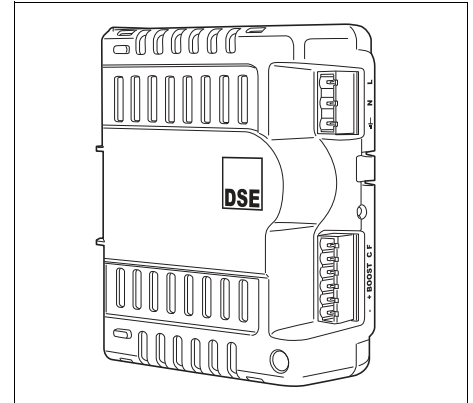

The battery charger provides multi-stage charging:

- Constant current: maximum current available during charge recovery phase
- Constant voltage
- Chargers automatically return to float mode when charging is complete

It also offers full protection:

- Reverse polarity protection, short circuit protection and current limiting
- Automatic recovery after the removal of fault conditions
- Battery charger thermal de-rate facility

To use the battery charger:

- Provide the X25 connector, located at the side of the power cubicle, with external power to use the battery charger.

9.3.2 Battery switch

The battery switch is situated inside the sound-insulated bodywork. It allows to open or to close the electrical connection between the battery and the engine circuits.



Never turn the battery switch to OFF during operation.

9.3.3 Engine coolant heater

To make sure that the engine can start and accept load immediately, an external cooling water heater (1000 W, 230 V) is provided which keeps the engine temperature between 38°C and 49°C.

9.3.4 Outlet sockets (S) - 3-phase

A brief description of all outlet sockets and circuit breakers provided on the generator is given hereafter:

X3 3-phase outlet socket (400 V AC)

Provides phases L1, L2 and L3, neutral and earthing.

X4 3-phase outlet socket (400 V AC)

Provides phases L1, L2 and L3, neutral and earthing.

X5 1-phase outlet socket (230 V AC)


Provides phase L3, neutral and earthing.

Q4 Circuit breaker for X4

Interrupts the power supply to X4 when a short-circuit occurs at the load side, or when the overcurrent protection (16 A) is activated. When tripped, Q4 interrupts the three phases towards X4. It can be reset after eliminating the problem.

Q5 Circuit breaker for X5

Interrupts the power supply to X5 when a short-circuit occurs at the load side, or when the earth leakage relay (30 mA) or the overcurrent protection (16 A) is activated. When tripped, Q5 interrupts phase L3 and the neutral towards X5. It can be reset after eliminating the problem.

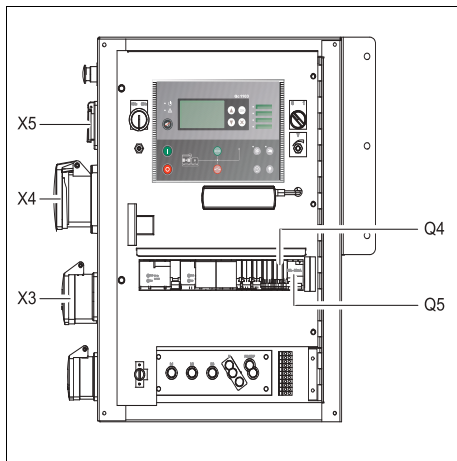

Circuit breaker Q1 does not only interrupt the power supply towards X1, but also towards X3, X4 and X5. Make sure to switch on circuit breakers Q1, Q4 and Q5 after starting the generator when power is supplied by means of X3, X4 or X5.

9.3.5 Outlet sockets (S) for Single phase option

A brief description of all outlet sockets and circuit breakers provided on the generator is given hereafter:

X2 1-phase outlet socket (230 V AC)

Provides phase L, neutral and earthing.

X3 1-phase outlet socket (230 V AC)

Provides phase L, neutral and earthing.

X5 1-phase outlet socket (230 V AC)


Provides phase L, neutral and earthing.

Q3 Circuit breaker for X3

Interrupts the power supply to X3 when a short-circuit occurs at the load side, or when the overcurrent protection (32 A) is activated. When tripped, Q3 interrupts phase L and the neutral towards X3. It can be reset after eliminating the problem.

Q5 Circuit breaker for X5


Interrupts the power supply to X5 when a short-circuit occurs at the load side, or when the overcurrent protection (16 A) is activated. When tripped, Q5 interrupts phase L and the neutral towards X5. It can be reset after eliminating the problem.

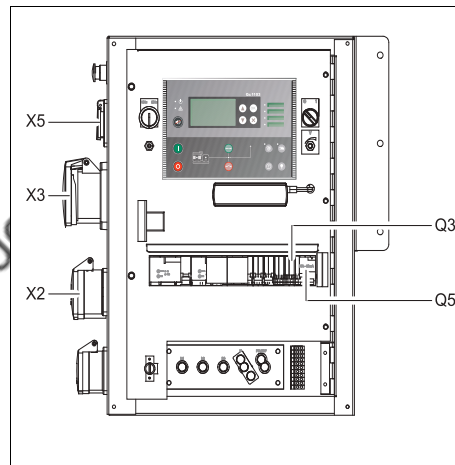

Circuit breaker Q1 does not only interrupt the power supply towards X1, but also towards X2, X3 and X5. Make sure to switch on circuit breakers Q1, Q3 and Q5 after starting the generator when power is supplied by means of X2, X3 or X5.

9.3.6 Single phase

The Single phase option provides single phase output voltage (e.g. 230 V).

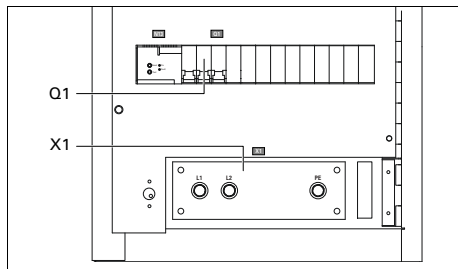

X1 Main power supply (230 V AC)

Terminals L1, L2 and PE (= earthing), hidden behind the control panel door and behind a small transparent door.

Q1 Circuit breaker for single phase operation

Interrupts phases L1 and L2 towards X1 when a short-circuit occurs at the load side or when the overcurrent protection (QAS 14: 40 A, QAS 20: 63 A) is activated. It must be reset manually after eliminating the problem.

9.3.7 Dual voltage (2V)

9.3.7.1 1 phase - 3 phase


The generator can run in two different modes:

1 phase, lower voltage

When using this selection, the generator provides a 230 V output voltage.

3 phase, higher voltage

When using this selection, the generator provides a 400 V output voltage.

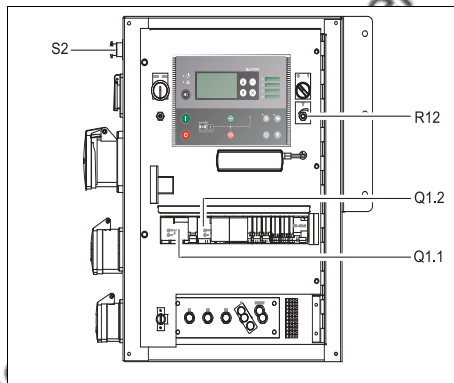

Q1.1 Circuit breaker for low voltage, high current

Interrupts the low voltage power supply towards X1 when a short-circuit occurs at the load side or when the overcurrent protection (QAS 14: 40 A, QAS 20: 63 A) is activated. It must be reset manually after eliminating the problem.

Q1.2 Circuit breaker for high voltage, low current

Interrupts the high voltage power supply towards X1 when a short-circuit occurs at the load side or when the overcurrent protection (QAS 14: 20 A, QAS 20: 32 A) is activated. It must be reset manually after eliminating the problem.

R12 Voltage adjustment

Allows to adjust the output voltage.



AMF operation is not possible with a dual voltage generator.

Depending on which mode the generator is running in, circuit breaker Q1.1 or Q1.2 will be operational.

Circuit breakers Q1.1 and Q1.2 cannot be switched on at the same time. This is prevented by means of the auxiliary voltage selection relays K11 and K12 (refer to the Circuit diagrams section).

The selection between the two modes is done by means of S10.

S10 Output voltage selection switch

Allows to select a 3 phase high output voltage or a 1 phase low output voltage. Selector switch S10 is located on the alternator.



Changing the output voltage is only allowed when the unit has stopped. After changing the output voltage by means of the selection switch S10, adjust the output voltage by means of potentiometer R12 to the required value.

9.3.7.2 3 phase - 3 phase


The generator can run in two different modes:

3 phase, lower voltage

When using this selection, the generator provides a 230 V output voltage. (IT = active)

3 phase, higher voltage

When using this selection, the generator provides a 400 V output voltage. (ELR = active)

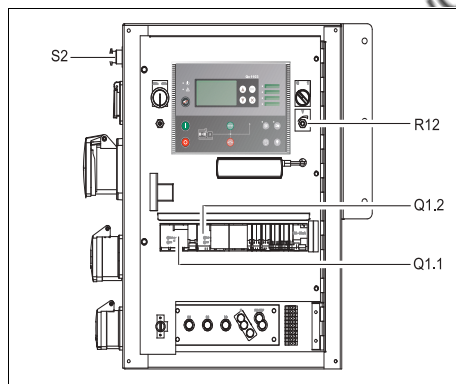

Q1.1 Circuit breaker for low voltage, high current

Interrupts the low voltage power supply towards X1 when a short-circuit occurs at the load side or when the overcurrent protection (QAS 14: 32 A, QAS 20: 50 A) is activated. It must be reset manually after eliminating the problem.

Q1.2 Circuit breaker for high voltage, low current

Interrupts the high voltage power supply towards X1 when a short-circuit occurs at the load side or when the overcurrent protection (QAS 14: 20 A, QAS 20: 32 A) is activated. It must be reset manually after eliminating the problem.

R12 Voltage adjustment

Allows to adjust the output voltage.



AMF operation is not possible with a dual voltage generator.

Depending on which mode the generator is running in, circuit breaker Q1.1 or Q1.2 will be operational.

Circuit breakers Q1.1 and Q1.2 cannot be switched on at the same time. This is prevented by means of the auxiliary voltage selection relays S10b and S10c (refer to the Circuit diagrams section).

The selection between the two modes is done by means of S10.

S10 Output voltage selection switch

Allows to select a 3 phase high output voltage or a 3 phase low output voltage. Selector switch S10 is located on the alternator.




Changing the output voltage is only allowed when the unit has stopped. After changing the output voltage by means of the selection switch S10, adjust the output voltage by means of potentiometer R12 to the required value.

9.3.8 IT-relay

The generator is wired for an IT network i.e. no supply lines of the power supply are directly earthed. A failure in insulation resulting in a too low insulation resistance, is detected by the insulation monitoring relay.



The generator shall not be operated with other networks (such as TT or TN). Doing so will cause tripping of the insulation monitoring relay. The generator is wired for an IT network i.e. no supply lines of the power supply are directly earthed. A failure in insulation resulting in too low an insulation resistance, is detected by the insulation monitoring relay. At each start-up and any time a new load is connected, the insulation resistance must be verified. Check for the correct setting of the insulation monitoring relay. (factory set at 13 k Ω)

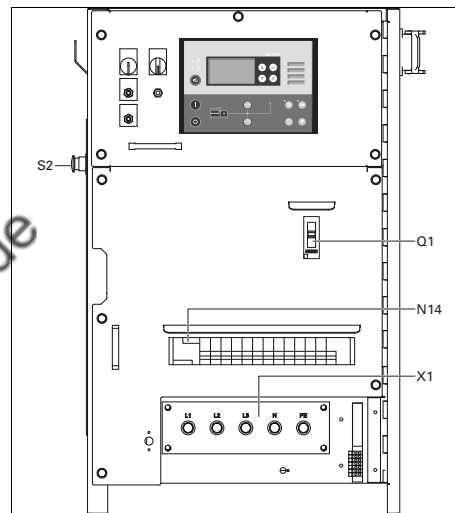

Q1 Circuit breaker for X1

Interrupts the power supply X1 when a short-circuit occurs at the load side, or when the overcurrent protection is activated. When activated, Q1 interrupts the three phases towards X1. It must be reset manually after eliminating the problem.

X1 Main power supply (400 V AC)

Terminals L1, L2, L3, N (= neutral) and PE (= earthing), hidden behind the control panel door and behind a small transparent door.

N14 Insulation monitoring relay


Checks the insulation resistance and activates Q1 when the insulation resistance is too low.

S2 Emergency stop button


Push the button to stop the generator in case of an emergency. When the button is pressed, it must be unlocked, by turning it anti-clockwise, before the generator can be restarted. The emergency stop button can be secured in the locked position with the key, to avoid unauthorized use.

9.3.9 "Electricité de France" (EDF)

When the EDF-option is installed, the unit operates as a standard unit when the neutral and the PE terminals are connected to each other (see figure below). In this case, an earth leakage at the side of the generator or at the side of the load will switch off the circuit breaker.

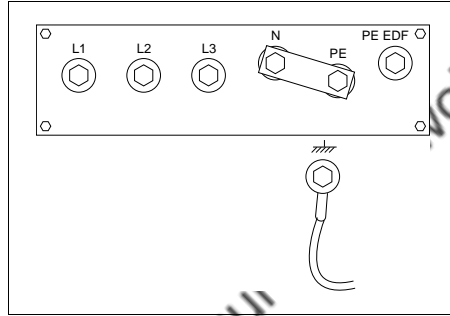

When EDF-option is installed, the unit operates as EDF-unit when the earthing, the PE and the PE EDF terminals are connected to each other (see figure below). In this case, an earth leakage at the side of the generator will switch off the circuit breaker. An earth leakage at the side of the load will not switch off the circuit breaker.

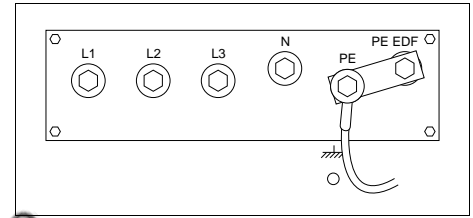


Changing the operation mode from standard unit to EDF-unit or vice versa has to be carried out by a qualified person from "Electricité de France".

9.3.10 Power Transfer Box (PTB)



The PTB (Power Transfer Box) is only available in combination with the Qc2103™ control panel.

When operating the Qc2103™ control panel in AMF mode, the installation of a PTB is required.

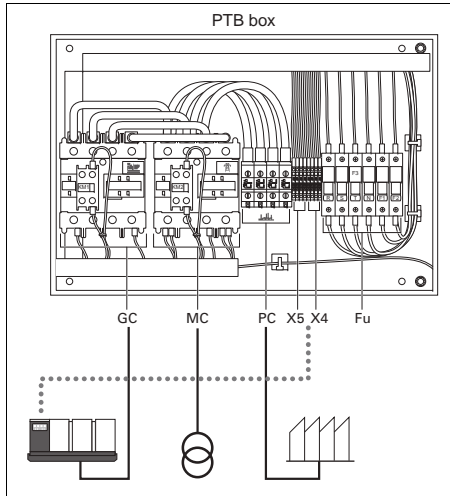

Fu.....Fuses F1, F2, F3

GC.....Generator contactor

MC.....Mains contactor

PCPlant contactor (generator contactor)

*X5... ..Customer connections Contactor
Operation*

To connect PTB customer connection X5 to the generator equipped with Qc2103™ controller, 4 connections have to be made on generator customer terminal strip X25. Connect GB to GB, MB to MB.

X4.....Customer connections Mains Sensing

To connect PTB customer connection X4 to the generator equipped with Qc2103™ controller, 4 connections have to be made on generator terminal strip X25. Connect N to N, R to R, S to S, T to T.

9.3.11 Spillage free liquid sensor

Whenever the sensor detects a spillage of fluid into the frame, the unit is shut-down.

9.4 Overview of the mechanical options

The following mechanical options are available:

- Integrated spark arrestor
- External fuel tank connection (with/without quick couplings)
- Undercarriage (axle, towbar, towing eyes)
- Wheel chocks
- Transport bumpers
- Inlet shutoff valve (ISV)

9.5 Description of the mechanical options


9.5.1 Integrated spark arrestor

The integrated spark arrestor option is included in the refinery equipment pack.


9.5.2 External fuel tank connection (with/without quick couplings)

The option external fuel tank connection allows to bypass the internal fuel tank and to connect an external fuel tank to the unit.

View outside

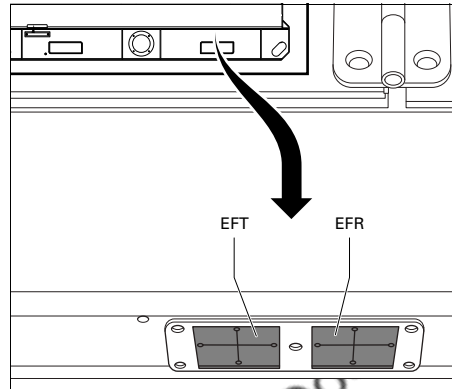

View inside

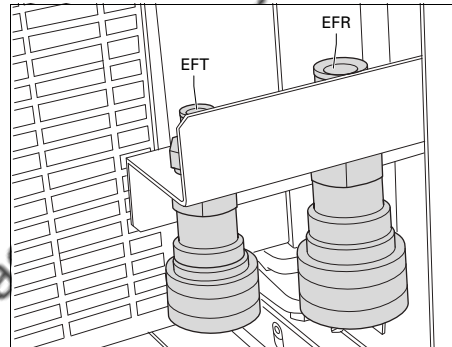


EFT | External fuel tank feed connection
EFR | External fuel tank return connection

When using this option, make sure to connect the fuel supply line as well as the fuel return line. Connections to fuel lines ought to be air-tight to prevent air from entering the fuel system. Turn the handle of 3-way valve to desired condition.



 Position 1: Indicates that the fuel supply line to the engine is connected to the internal fuel tank.



Position 2: Indicates that the fuel supply line to the engine is connected to the external fuel tank.

9.5.3 Undercarriage (axle, towbar, towing eyes)

The undercarriage is equipped with an adjustable towbar with brakes, with DIN-eye, BNA-eye, NATO-eye, GB-eye, ITA-eye or ball coupling and with road signalisation which is approved by EC legislation.

When using this option

- Make sure that the towing equipment of the vehicle matches the towing eye before towing the generator.
- Never move the generator while electrical cables are connected to the unit.
- Always apply the hand brake when parking the generator.
- Leave enough space for operation, inspection and maintenance (at least 1 meter at each side).


To maintain the undercarriage

- Check the tightness of the towbar bolts, the axle bolts and the wheel nuts at least twice a year and after the initial 50 hours of operation.
- Grease the wheel axle suspension bearings, the drawbar to the steering gear shaft and the spindle of the brake handle at least twice a year. Use ball bearing grease for the wheel bearings and graphite grease for the drawbar and spindle.
- Check the brake system twice a year.
- Check the condition of the vibration dampers twice a year.
- Repack the wheel hub bearings once a year using grease.
- Wheel chocks allows to park the generator on sloping ground. Place wheel chocks in front of or behind the wheels to immobilize the generator.

9.5.4 Wheel chocks

The option wheel chocks allows to park the generator on sloping ground. Place wheel chocks in front of or behind the wheels to immobilize the generator.

9.5.5 Transport bumpers

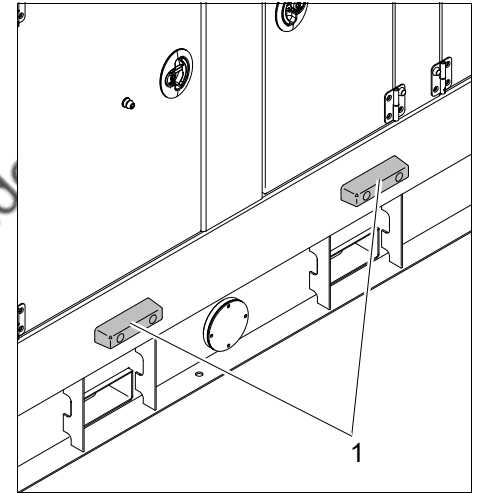

9.5.6 Inlet Shutoff valve (ISV)

The engine air inlet shut-off valve option is included in the refinery equipment pack. It will prevent overspeeding of the engine due to combustible gases being traced within the normal engine air intake.

10 Technical specifications

10.1 Technical specifications for QAS 14 units

10.1.1 Settings of switches

Switch	Function	Activates at
Engine oil pressure	Shut down	0.5 bar
Engine coolant temperature	Shut down	103°C

10.1.2 Specifications of the engine/alternator/unit

		50 Hz
<i>Reference conditions 1)</i>	Rated frequency	50 Hz
	Rated speed	1500 rpm
	Generator service duty	PRP
	Absolute air inlet pressure	1 bar(a)
	Relative air humidity	30%
	Air inlet temperature	25°C
<i>Limitations 2)</i>	Maximum ambient temperature	50°C
	Altitude capability	4000 m
	Maximum relative air humidity	85%
	Minimum starting temperature	-15°C
	Minimum starting temperature with coldstart equipment (optional)	-20°C
<i>Performance data 2) 3) 4) 5)</i>	Rated active power (PRP) 3ph	11.3 kW
	Rated active power (PRP) 3ph lower voltage	11.3 kW
	Rated active power (PRP) 1ph	8.4 kW
	Rated (lagging) 3ph	0.8
	Rated (lagging) 1ph	1
	Rated apparent power (PRP) 3ph	14.1 kVA
	Rated apparent power (PRP) 3ph lower voltage	14.1 kVA
	Rated apparent power (PRP) 1ph	8.4 kVA

Application data

Rated voltage 3ph line to line	400 V
Rated voltage 3ph line to line lower voltage	230 V
Rated voltage 1ph line to line	230 V
Rated current 3ph	20.4 A
Rated current 3ph lower voltage	35.5 A
Rated current 1ph	36.5 A
Performance class (acc.ISO 8528-5:1993)	G2
Single step load acceptance	11.3 kW
	100%
Frequency droop	isochronous
Fuel consumption at 50% load	1.91 kg/h
Fuel consumption at 75% load	2.51 kg/h
Fuel consumption at 100% load	3.21 kg/h
Specific fuel consumption	0.284 kg/kWh
Fuel autonomy at full load with standard tank	30.5 h
Maximum oil consumption at full load	0.02 l/h
Maximum sound power level (Lw) complies with 2000/14/EC	87 dB(A)
Capacity of fuel tank	115 l
Single step load capability	11.3 kW
	100%
	PRP
Mode of operation	land use
Site	single
Operation	manual/auto
Start-up and control mode	unspecified
Start-up time	transportable/D
Mobility/Config. acc. to ISO 8528-1:1993 (optional)	mobile/E
Mounting	fully resilient
Climatic exposure	open air
Status of neutral (TT or TN)	earthed
Status of neutral (IT) (optional)	insulated
Standard	ISO 3046/ISO 8528-2
Make	Kubota

Design data engine

	Model	D1703M-E4BG
	Rated net output	13.2 kW
	Rating type (acc. ISO3046-7)	ICXN
	Coolant	coolant
	Combustion system	indirect injection
	Aspiration	natural aspirated
	Number of cylinders	3
	Swept volume	1.7 l
	Speed governing	electronic
	Capacity of oil sump - initial fill	8 l
	Capacity of cooling system	9 l
	Electrical system	12 Vdc
	Emission Compliance	EU Stage 5
	Maximum permissible load factor of PRP during 24h period	100%
<i>Design data alternator</i>	Standard	IEC 34-1/ISO 8528-3
	Make	Leroy Somer
	Model	LSA 40S3
	Rated output, class H temp. rise	15 kVA (3ph) - 10.5 kVA (1ph)
	Rating type (acc. ISO8528-3)	"BR" 125/40°C
	Degree of protection (IP index acc. NF EN 60529)	23
	Insulation class - stator	H
	Insulation class - rotor	H
	Number of wires	12
<i>Electrical power circuit</i>	Circuit-breaker, 3ph	
	Number of poles	4
	Thermal release I_t (thermal release is higher at 25°C)	20 A
	Magnetic release I_m	3.5 x I_t
	Circuit-breaker, 3ph - Lower voltage	
	Number of poles	3
	Thermal release I_t	32 A
	Magnetic release I_m	3.5 x I_t

Circuit-breaker, 1ph

Number of poles

Thermal release I_t Magnetic release I_m **Fault current protection**

Insulation resistance (optional)

Residual current release I_{dn}

2

40 A

 $3.5 \times I_t$

10-100 kOhm

0.03-30 A

Notes

- 1) Reference conditions for engine performance to ISO 3046-1.
- 2) See derating diagram or consult the factory for other conditions.
- 3) At reference conditions unless otherwise stated.
- 4) Rating definition (ISO 8528-1):

LTP: Limited Time Power is the maximum electrical power which a generating set is capable of delivering (at variable load), in the event of a utility power failure (for up to 500 hours per year of which a maximum of 300 hours is continuous running). No overload is permitted on these ratings. The alternator is peak continuous rated (as defined in ISO 8528-3) at 25°C.

PRP: Prime Power is the maximum power available during a variable power sequence, which may be run for an unlimited number of hours per year, between stated maintenance intervals and under the stated ambient conditions. A 10% overload is permitted for 1 hour in 12 hours. The permissible average power output during a 24h period shall not exceed the stated load factor as indicated in the Technical Specifications above.

- 5) Specific mass fuel used: 0.86 kg/l.

Altitude m	Atmospheric pressure mmHg kPa		Upper: intake air temperature (°C)																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																			
			Lower: saturation vapor pressure (kPa)																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																			
			0	5	10	15	20	25	30	35	40	45	50																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																									
			0.61	0.67	0.73	0.77	0.84	0.91	0.98	1.05	1.12	1.19	1.26	1.33	1.40	1.47	1.54	1.61	1.68	1.75	1.82	1.89	1.96	2.03	2.10	2.17	2.24	2.31	2.38	2.45	2.52	2.59	2.66	2.73	2.80	2.87	2.94	3.01	3.08	3.15	3.22	3.29	3.36	3.43	3.50	3.57	3.64	3.71	3.78	3.85	3.92	3.99	4.06	4.13	4.20	4.27	4.34	4.41	4.48	4.55	4.62	4.69	4.76	4.83	4.90	4.97	5.04	5.11	5.18	5.25	5.32	5.39	5.46	5.53	5.60	5.67	5.74	5.81	5.88	5.95	6.02	6.09	6.16	6.23	6.30	6.37	6.44	6.51	6.58	6.65	6.72	6.79	6.86	6.93	7.00	7.07	7.14	7.21	7.28	7.35	7.42	7.49	7.56	7.63	7.70	7.77	7.84	7.91	7.98	8.05	8.12	8.19	8.26	8.33	8.40	8.47	8.54	8.61	8.68	8.75	8.82	8.89	8.96	9.03	9.10	9.17	9.24	9.31	9.38	9.45	9.52	9.59	9.66	9.73	9.80	9.87	9.94	10.01	10.08	10.15	10.22	10.29	10.36	10.43	10.50	10.57	10.64	10.71	10.78	10.85	10.92	10.99	11.06	11.13	11.20	11.27	11.34	11.41	11.48	11.55	11.62	11.69	11.76	11.83	11.90	11.97	12.04	12.11	12.18	12.25	12.32	12.39	12.46	12.53	12.60	12.67	12.74	12.81	12.88	12.95	13.02	13.09	13.16	13.23	13.30	13.37	13.44	13.51	13.58	13.65	13.72	13.79	13.86	13.93	14.00	14.07	14.14	14.21	14.28	14.35	14.42	14.49	14.56	14.63	14.70	14.77	14.84	14.91	14.98	15.05	15.12	15.19	15.26	15.33	15.40	15.47	15.54	15.61	15.68	15.75	15.82	15.89	15.96	16.03	16.10	16.17	16.24	16.31	16.38	16.45	16.52	16.59	16.66	16.73	16.80	16.87	16.94	17.01	17.08	17.15	17.22	17.29	17.36	17.43	17.50	17.57	17.64	17.71	17.78	17.85	17.92	17.99	18.06	18.13	18.20	18.27	18.34	18.41	18.48	18.55	18.62	18.69	18.76	18.83	18.90	18.97	19.04	19.11	19.18	19.25	19.32	19.39	19.46	19.53	19.60	19.67	19.74	19.81	19.88	19.95	20.02	20.09	20.16	20.23	20.30	20.37	20.44	20.51	20.58	20.65	20.72	20.79	20.86	20.93	21.00	21.07	21.14	21.21	21.28	21.35	21.42	21.49	21.56	21.63	21.70	21.77	21.84	21.91	21.98	22.05	22.12	22.19	22.26	22.33	22.40	22.47	22.54	22.61	22.68	22.75	22.82	22.89	22.96	23.03	23.10	23.17	23.24	23.31	23.38	23.45	23.52	23.59	23.66	23.73	23.80	23.87	23.94	24.01	24.08	24.15	24.22	24.29	24.36	24.43	24.50	24.57	24.64	24.71	24.78	24.85	24.92	24.99	25.06	25.13	25.20	25.27	25.34	25.41	25.48	25.55	25.62	25.69	25.76	25.83	25.90	25.97	26.04	26.11	26.18	26.25	26.32	26.39	26.46	26.53	26.60	26.67	26.74	26.81	26.88	26.95	27.02	27.09	27.16	27.23	27.30	27.37	27.44	27.51	27.58	27.65	27.72	27.79	27.86	27.93	28.00	28.07	28.14	28.21	28.28	28.35	28.42	28.49	28.56	28.63	28.70	28.77	28.84	28.91	28.98	29.05	29.12	29.19	29.26	29.33	29.40	29.47	29.54	29.61	29.68	29.75	29.82	29.89	29.96	30.03	30.10	30.17	30.24	30.31	30.38	30.45	30.52	30.59	30.66	30.73	30.80	30.87	30.94	31.01	31.08	31.15	31.22	31.29	31.36	31.43	31.50	31.57	31.64	31.71	31.78	31.85	31.92	31.99	32.06	32.13	32.20	32.27	32.34	32.41	32.48	32.55	32.62	32.69	32.76	32.83	32.90	32.97	33.04	33.11	33.18	33.25	33.32	33.39	33.46	33.53	33.60	33.67	33.74	33.81	33.88	33.95	34.02	34.09	34.16	34.23	34.30	34.37	34.44	34.51	34.58	34.65	34.72	34.79	34.86	34.93	35.00	35.07	35.14	35.21	35.28	35.35	35.42	35.49	35.56	35.63	35.70	35.77	35.84	35.91	35.98	36.05	36.12	36.19	36.26	36.33	36.40	36.47	36.54	36.61	36.68	36.75	36.82	36.89	36.96	37.03	37.10	37.17	37.24	37.31	37.38	37.45	37.52	37.59	37.66	37.73	37.80	37.87	37.94	38.01	38.08	38.15	38.22	38.29	38.36	38.43	38.50	38.57	38.64	38.71	38.78	38.85	38.92	38.99	39.06	39.13	39.20	39.27	39.34	39.41	39.48	39.55	39.62	39.69	39.76	39.83	39.90	39.97	40.04	40.11	40.18	40.25	40.32	40.39	40.46	40.53	40.60	40.67	40.74	40.81	40.88	40.95	41.02	41.09	41.16	41.23	41.30	41.37	41.44	41.51	41.58	41.65	41.72	41.79	41.86	41.93	42.00	42.07	42.14	42.21	42.28	42.35	42.42	42.49	42.56	42.63	42.70	42.77	42.84	42.91	42.98	43.05	43.12	43.19	43.26	43.33	43.40	43.47	43.54	43.61	43.68	43.75	43.82	43.89	43.96	44.03	44.10	44.17	44.24	44.31	44.38	44.45	44.52	44.59	44.66	44.73	44.80	44.87	44.94	45.01	45.08	45.15	45.22	45.29	45.36	45.43	45.50	45.57	45.64	45.71	45.78	45.85	45.92	45.99	46.06	46.13	46.20	46.27	46.34	46.41	46.48	46.55	46.62	46.69	46.76	46.83	46.90	46.97	47.04	47.11	47.18	47.25	47.32	47.39	47.46	47.53	47.60	47.67	47.74	47.81	47.88	47.95	48.02	48.09	48.16	48.23	48.30	48.37	48.44	48.51	48.58	48.65	48.72	48.79	48.86	48.93	49.00	49.07	49.14	49.21	49.28	49.35	49.42	49.49	49.56	49.63	49.70	49.77	49.84	49.91	49.98	50.05	50.12	50.19	50.26	50.33	50.40	50.47	50.54	50.61	50.68	50.75	50.82	50.89	50.96	51.03	51.10	51.17	51.24	51.31	51.38	51.45	51.52	51.59	51.66	51.73	51.80	51.87	51.94	52.01	52.08	52.15	52.22	52.29	52.36	52.43	52.50	52.57	52.64	52.71	52.78	52.85	52.92	52.99	53.06	53.13	53.20	53.27	53.34	53.41	53.48	53.55	53.62	53.69	53.76	53.83	53.90	53.97	54.04	54.11	54.18	54.25	54.32	54.39	54.46	54.53	54.60	54.67	54.74	54.81	54.88	54.95	55.02	55.09	55.16	55.23	55.30	55.37	55.44	55.51	55.58	55.65	55.72	55.79	55.86	55.93	56.00	56.07	56.14	56.21	56.28	56.35	56.42	56.49	56.56	56.63	56.70	56.77	56.84	56.91	56.98	57.05	57.12	57.19	57.26	57.33	57.40	57.47	57.54	57.61	57.68	57.75	57.82	57.89	57.96	58.03	58.10	58.17	58.24	58.31	58.38	58.45	58.52	58.59	58.66	58.73	58.80	58.87	58.94	59.01	59.08	59.15	59.22	59.29	59.36	59.43	59.50	59.57	59.64	59.71	59.78	59.85	59.92	59.99	60.06	60.13	60.20	60.27	60.34	60.41	60.48	60.55	60.62	60.69	60.76	60.83	60.90	60.97	61.04	61.11	61.18	61.25	61.32	61.39	61.46	61.53	61.60	61.67	61.74	61.81	61.88	61.95	62.02	62.09	62.16	62.23	62.30	62.37	62.44	62.51	62.58	62.65	62.72	62.79	62.86	62.93	63.00	63.07	63.14	63.21	63.28	63.35	63.42	63.49	63.56	63.63	63.70	63.77	63.84	63.91	63.98	64.05	64.12	64.19	64.26	64.33	64.40	64.47	64.54	64.61	64.68	64.75	64.82	64.89	64.96	65.03	65.10	65.17	65.24	65.31	65.38	65.45	65.52	65.59	65.66	65.73	65.80	65.87	65.94	66.01	66.08	66.15	66.22	66.29	66.36	66.43	66.50	66.57	66.64	66.71	66.78	66.85	66.92	66.99	67.06	67.13	67.20	67.27	67.34	67.41	67.48	67.55	67.62	67.69	67.76	67.83	67.90	67.97	68.04	68.11	68.18	68.25	68.32	68.39	68.46	68.53	68.60	68.67	68.74	68.81	68.88	68.95	69.02	69.09	69.16	69.23	69.30	69.37	69.44	69.51	69.58	69.65	69.72	69.79	69.86	69.93	70.00	70.07	70.14	70.21	70.28	70.35	70.42	70.49	70.56	70.63	70.70	70.77	70.84	70.91	70.98	71.05	71.12	71.19	71.26	71.33	71.40	71.47	71.54	71.61	71.68	71.75	71.82	71.89	71.96	72.03	72.10	72.17	72.24	72.31	72.38	72.45	72.52	72.59	72.66	72.73	72.80	72.87	72.94	73.01	73.08	73.15	73.22	73.29	73.36	73.43	73.50	73.57	73.64	73.71	73.78	73.85	73.92	73.99	74.06	74.13	74.20	74.27	74.34	74.41	74.48	74.55	74.62	74.69	74.76	74.83	74.90	74.97	75.04	75.11	75.18	75.25	75.32	75.39	75.46	75.53	75.60	75.67	75.74	75.81	75.88	75.95	76.02	76.09	76.16	76.23	76.30	76.37	76.44	76.51	76.58	76.65	76.72	76.79	76.86	76.93	77.00	77.07	77.14	77.21	77.28	77.35	77.42	77.49	77.56	77.63	77.70	77.77	77.84	77.91	77.98	

10.2 Technical specifications for QAS 20 units

10.2.1 Settings of switches

<i>Switch</i>	<i>Function</i>	<i>Activates at</i>
Engine oil pressure	shut down	0.5 bar
Engine coolant temperature	shut down	105°C

10.2.2 Specifications of the engine/alternator/unit

		50 Hz
<i>Reference conditions 1)</i>	Rated frequency	50 Hz
	Rated speed	1500 rpm
	Generator service duty	PRP
	Absolute air inlet pressure	1 bar(a)
	Relative air humidity	30%
	Air inlet temperature	25°C
<i>Limitations 2)</i>	Maximum ambient temperature	50°C
	Altitude capability	4000 m
	Maximum relative air humidity	85%
	Minimum starting temperature	-15°C
	Minimum starting temperature with coldstart equipment (optional)	-20°C
<i>Performance data 2) 3) 4) 5)</i>	Rated active power (PRP) 3ph	14 kW
	Rated active power (PRP) 3ph lower voltage	14 kW
	Rated active power (PRP) 1ph	11.2 kW
	Rated (lagging) 3ph	0.8
	Rated (lagging) 1ph	1
	Rated apparent power (PRP) 3ph	17.5 kVA
	Rated apparent power (PRP) 3ph lower voltage	17.5 kVA
	Rated apparent power (PRP) 1ph	11.2 kVA
	Rated voltage 3ph line to line	400 V

Application data

Design data alternator 4)

Rated voltage 3ph line to line lower voltage	230 V
Rated voltage 1ph line to line	230 V
Rated current 3ph	25.3 A
Rated current 3ph lower voltage	43.9 A
Rated current 1ph	48.7 A
Performance class (acc.ISO 8528-5:1993)	G2
Single step load acceptance	14 kW 100%
Frequency droop	isochronous
Fuel consumption at 50% load	2.27 kg/h
Fuel consumption at 75% load	3.09 kg/h
Fuel consumption at 100% load	3.96 kg/h
Specific fuel consumption	0.282 kg/kWh
Fuel autonomy at full load with standard tank	24.7 h
Maximum oil consumption at full load	0.02 l/h
Maximum sound power level (L _w) complies with 2000/14/EC	88 dB(A)
Capacity of fuel tank	115 l
Single step load capability	14 kW 100%
Mode of operation	PRP
Site	land use
Operation	single
Start-up and control mode	manual/auto
Start-up time	unspecified
Mobility/Config. acc. to ISO 8528-1:1993 (optional)	transportable/D mobile/E
Mounting	fully resilient
Climatic exposure	open air
Status of neutral (TT or TN) (optional)	earthed
Status of neutral (IT) (optional)	insulated
Standard	IEC 34-1/ISO 8528-3
Make	Leroy Somer
Model	LSA 40M5

Design data engine

Rated output, class H temp. rise
Rating type (acc. ISO 8528-3)
Degree of protection (IP index acc. NF EN 60-529)
Insulation class - stator
Insulation class - rotor
Number of wires
Standard
Make
Model
Rated net output
Rating type (acc. ISO3046-7)
Coolant
Combustion system
Aspiration
Number of cylinders
Swept volume
Speed governing
Capacity of oil sump - initial fill
Capacity of cooling system
Electrical system
Emission compliance
Maximum permissible load factor of PRP during 24h period

Electrical power circuit

Circuit-breaker, 3ph
Number of poles
Thermal release I_t (thermal release is higher at 25°C)
Magnetic release I_m

Circuit-breaker, 3ph - Lower voltage
Number of poles
Thermal release I_t
Magnetic release I_m

20 kVA (3ph) - 14 kVA (1ph)
"BR" 125/40°C
23
H
H
12

ISO 3046/ISO 8528-2
Kubota
V2203-M-E4BG
16.1 kW
ICXN
coolant
indirect injection
natural aspirated
4
2.2 l
electronic
9 l
9 l
12 Vdc
EU Stage 5
100%

4
32 A
3.5 x I_t

3
50 A
3.5 x I_t

Circuit-breaker, 1ph

Number of poles
Thermal release I_t
Magnetic release I_m

2
63 A
3.5 x I_t

Fault current protection

Insulation resistance (optional)
Residual current release I_{dn}

10-100 kOhm
0.03-30 A

Notes

- 1) Reference conditions for engine performance to ISO 3046-1.
- 2) See derating diagram or consult the factory for other conditions.
- 3) At reference conditions unless otherwise stated.
- 4) Rating definition (ISO 8528-1):
LTP: Limited Time Power is the maximum electrical power which a generating set is capable of delivering (at variable load), in the event of a utility power failure (for up to 500 hours per year of which a maximum of 300 hours is continuous running). No overload is permitted on these ratings. The alternator is peak continuous rated (as defined in ISO 8528-3) at 25°C.
PRP: Prime Power is the maximum power available during a variable power sequence, which may be run for an unlimited number of hours per year, between stated maintenance intervals and under the stated ambient conditions. A 10% overload is permitted for 1 hour in 12 hours. The permissible average power output during a 24h period shall not exceed the stated load factor as indicated in the Technical Specifications above.
- 5) Specific mass fuel used: 0.86 kg/l.

Altitude m	Atmospheric pressure mmHg kPa		Upper: intake air temperature (°C)																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																	
			Lower: saturation vapor pressure (kPa)																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																	
			0	5	10	15	20	25	30	35	40	45	50																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																							
0	760	101.3	1.02	1.05	1.07	1.09	1.11	1.13	1.15	1.17	1.19	1.21	1.23	1.25	1.27	1.29	1.31	1.33	1.35	1.37	1.39	1.41	1.43	1.45	1.47	1.49	1.51	1.53	1.55	1.57	1.59	1.61	1.63	1.65	1.67	1.69	1.71	1.73	1.75	1.77	1.79	1.81	1.83	1.85	1.87	1.89	1.91	1.93	1.95	1.97	1.99	2.01	2.03	2.05	2.07	2.09	2.11	2.13	2.15	2.17	2.19	2.21	2.23	2.25	2.27	2.29	2.31	2.33	2.35	2.37	2.39	2.41	2.43	2.45	2.47	2.49	2.51	2.53	2.55	2.57	2.59	2.61	2.63	2.65	2.67	2.69	2.71	2.73	2.75	2.77	2.79	2.81	2.83	2.85	2.87	2.89	2.91	2.93	2.95	2.97	2.99	3.01	3.03	3.05	3.07	3.09	3.11	3.13	3.15	3.17	3.19	3.21	3.23	3.25	3.27	3.29	3.31	3.33	3.35	3.37	3.39	3.41	3.43	3.45	3.47	3.49	3.51	3.53	3.55	3.57	3.59	3.61	3.63	3.65	3.67	3.69	3.71	3.73	3.75	3.77	3.79	3.81	3.83	3.85	3.87	3.89	3.91	3.93	3.95	3.97	3.99	4.01	4.03	4.05	4.07	4.09	4.11	4.13	4.15	4.17	4.19	4.21	4.23	4.25	4.27	4.29	4.31	4.33	4.35	4.37	4.39	4.41	4.43	4.45	4.47	4.49	4.51	4.53	4.55	4.57	4.59	4.61	4.63	4.65	4.67	4.69	4.71	4.73	4.75	4.77	4.79	4.81	4.83	4.85	4.87	4.89	4.91	4.93	4.95	4.97	4.99	5.01	5.03	5.05	5.07	5.09	5.11	5.13	5.15	5.17	5.19	5.21	5.23	5.25	5.27	5.29	5.31	5.33	5.35	5.37	5.39	5.41	5.43	5.45	5.47	5.49	5.51	5.53	5.55	5.57	5.59	5.61	5.63	5.65	5.67	5.69	5.71	5.73	5.75	5.77	5.79	5.81	5.83	5.85	5.87	5.89	5.91	5.93	5.95	5.97	5.99	6.01	6.03	6.05	6.07	6.09	6.11	6.13	6.15	6.17	6.19	6.21	6.23	6.25	6.27	6.29	6.31	6.33	6.35	6.37	6.39	6.41	6.43	6.45	6.47	6.49	6.51	6.53	6.55	6.57	6.59	6.61	6.63	6.65	6.67	6.69	6.71	6.73	6.75	6.77	6.79	6.81	6.83	6.85	6.87	6.89	6.91	6.93	6.95	6.97	6.99	7.01	7.03	7.05	7.07	7.09	7.11	7.13	7.15	7.17	7.19	7.21	7.23	7.25	7.27	7.29	7.31	7.33	7.35	7.37	7.39	7.41	7.43	7.45	7.47	7.49	7.51	7.53	7.55	7.57	7.59	7.61	7.63	7.65	7.67	7.69	7.71	7.73	7.75	7.77	7.79	7.81	7.83	7.85	7.87	7.89	7.91	7.93	7.95	7.97	7.99	8.01	8.03	8.05	8.07	8.09	8.11	8.13	8.15	8.17	8.19	8.21	8.23	8.25	8.27	8.29	8.31	8.33	8.35	8.37	8.39	8.41	8.43	8.45	8.47	8.49	8.51	8.53	8.55	8.57	8.59	8.61	8.63	8.65	8.67	8.69	8.71	8.73	8.75	8.77	8.79	8.81	8.83	8.85	8.87	8.89	8.91	8.93	8.95	8.97	8.99	9.01	9.03	9.05	9.07	9.09	9.11	9.13	9.15	9.17	9.19	9.21	9.23	9.25	9.27	9.29	9.31	9.33	9.35	9.37	9.39	9.41	9.43	9.45	9.47	9.49	9.51	9.53	9.55	9.57	9.59	9.61	9.63	9.65	9.67	9.69	9.71	9.73	9.75	9.77	9.79	9.81	9.83	9.85	9.87	9.89	9.91	9.93	9.95	9.97	9.99	10.01	10.03	10.05	10.07	10.09	10.11	10.13	10.15	10.17	10.19	10.21	10.23	10.25	10.27	10.29	10.31	10.33	10.35	10.37	10.39	10.41	10.43	10.45	10.47	10.49	10.51	10.53	10.55	10.57	10.59	10.61	10.63	10.65	10.67	10.69	10.71	10.73	10.75	10.77	10.79	10.81	10.83	10.85	10.87	10.89	10.91	10.93	10.95	10.97	10.99	11.01	11.03	11.05	11.07	11.09	11.11	11.13	11.15	11.17	11.19	11.21	11.23	11.25	11.27	11.29	11.31	11.33	11.35	11.37	11.39	11.41	11.43	11.45	11.47	11.49	11.51	11.53	11.55	11.57	11.59	11.61	11.63	11.65	11.67	11.69	11.71	11.73	11.75	11.77	11.79	11.81	11.83	11.85	11.87	11.89	11.91	11.93	11.95	11.97	11.99	12.01	12.03	12.05	12.07	12.09	12.11	12.13	12.15	12.17	12.19	12.21	12.23	12.25	12.27	12.29	12.31	12.33	12.35	12.37	12.39	12.41	12.43	12.45	12.47	12.49	12.51	12.53	12.55	12.57	12.59	12.61	12.63	12.65	12.67	12.69	12.71	12.73	12.75	12.77	12.79	12.81	12.83	12.85	12.87	12.89	12.91	12.93	12.95	12.97	12.99	13.01	13.03	13.05	13.07	13.09	13.11	13.13	13.15	13.17	13.19	13.21	13.23	13.25	13.27	13.29	13.31	13.33	13.35	13.37	13.39	13.41	13.43	13.45	13.47	13.49	13.51	13.53	13.55	13.57	13.59	13.61	13.63	13.65	13.67	13.69	13.71	13.73	13.75	13.77	13.79	13.81	13.83	13.85	13.87	13.89	13.91	13.93	13.95	13.97	13.99	14.01	14.03	14.05	14.07	14.09	14.11	14.13	14.15	14.17	14.19	14.21	14.23	14.25	14.27	14.29	14.31	14.33	14.35	14.37	14.39	14.41	14.43	14.45	14.47	14.49	14.51	14.53	14.55	14.57	14.59	14.61	14.63	14.65	14.67	14.69	14.71	14.73	14.75	14.77	14.79	14.81	14.83	14.85	14.87	14.89	14.91	14.93	14.95	14.97	14.99	15.01	15.03	15.05	15.07	15.09	15.11	15.13	15.15	15.17	15.19	15.21	15.23	15.25	15.27	15.29	15.31	15.33	15.35	15.37	15.39	15.41	15.43	15.45	15.47	15.49	15.51	15.53	15.55	15.57	15.59	15.61	15.63	15.65	15.67	15.69	15.71	15.73	15.75	15.77	15.79	15.81	15.83	15.85	15.87	15.89	15.91	15.93	15.95	15.97	15.99	16.01	16.03	16.05	16.07	16.09	16.11	16.13	16.15	16.17	16.19	16.21	16.23	16.25	16.27	16.29	16.31	16.33	16.35	16.37	16.39	16.41	16.43	16.45	16.47	16.49	16.51	16.53	16.55	16.57	16.59	16.61	16.63	16.65	16.67	16.69	16.71	16.73	16.75	16.77	16.79	16.81	16.83	16.85	16.87	16.89	16.91	16.93	16.95	16.97	16.99	17.01	17.03	17.05	17.07	17.09	17.11	17.13	17.15	17.17	17.19	17.21	17.23	17.25	17.27	17.29	17.31	17.33	17.35	17.37	17.39	17.41	17.43	17.45	17.47	17.49	17.51	17.53	17.55	17.57	17.59	17.61	17.63	17.65	17.67	17.69	17.71	17.73	17.75	17.77	17.79	17.81	17.83	17.85	17.87	17.89	17.91	17.93	17.95	17.97	17.99	18.01	18.03	18.05	18.07	18.09	18.11	18.13	18.15	18.17	18.19	18.21	18.23	18.25	18.27	18.29	18.31	18.33	18.35	18.37	18.39	18.41	18.43	18.45	18.47	18.49	18.51	18.53	18.55	18.57	18.59	18.61	18.63	18.65	18.67	18.69	18.71	18.73	18.75	18.77	18.79	18.81	18.83	18.85	18.87	18.89	18.91	18.93	18.95	18.97	18.99	19.01	19.03	19.05	19.07	19.09	19.11	19.13	19.15	19.17	19.19	19.21	19.23	19.25	19.27	19.29	19.31	19.33	19.35	19.37	19.39	19.41	19.43	19.45	19.47	19.49	19.51	19.53	19.55	19.57	19.59	19.61	19.63	19.65	19.67	19.69	19.71	19.73	19.75	19.77	19.79	19.81	19.83	19.85	19.87	19.89	19.91	19.93	19.95	19.97	19.99	20.01	20.03	20.05	20.07	20.09	20.11	20.13	20.15	20.17	20.19	20.21	20.23	20.25	20.27	20.29	20.31	20.33	20.35	20.37	20.39	20.41	20.43	20.45	20.47	20.49	20.51	20.53	20.55	20.57	20.59	20.61	20.63	20.65	20.67	20.69	20.71	20.73	20.75	20.77	20.79	20.81	20.83	20.85	20.87	20.89	20.91	20.93	20.95	20.97	20.99	21.01	21.03	21.05	21.07	21.09	21.11	21.13	21.15	21.17	21.19	21.21	21.23	21.25	21.27	21.29	21.31	21.33	21.35	21.37	21.39	21.41	21.43	21.45	21.47	21.49	21.51	21.53	21.55	21.57	21.59	21.61	21.63	21.65	21.67	21.69	21.71	21.73	21.75	21.77	21.79	21.81	21.83	21.85	21.87	21.89	21.91	21.93	21.95	21.97	21.99	22.01	22.03	22.05	22.07	22.09	22.11	22.13	22.15	22.17	22.19	22.21	22.23	22.25	22.27	22.29	22.31	22.33	22.35	22.37	22.39	22.41	22.43	22.45	22.47	22.49	22.51	22.53	22.55	22.57	22.59	22.61	22.63	22.65	22.67	22.69	22.71	22.73	22.75	22.77	22.79	22.81	22.83	22.85	22.87	22.89	22.91	22.93	22.95	22.97	22.99	23.01	23.03	23.05	23.07	23.09	23.11	23.13	23.15	23.17	23.19	23.21	23.23	23.25	23.27	23.29	23.31	23.33	23.35	23.37	23.39	23.41	23.43	23.45	23.47	23.49	23.51	23.53	23.55	23.57	23.59	23.61	23.63	23.65	23.67	23.69	23.71	23.73	23.75	23.77	23.79	23.81	23.83	23.85	23.87	23.89	23.91	23.93	23.95	23.97	23.99	24.01	24.03	24.05	24.07	24.09	24.11	24.13	24.15	24.17	24.19	24.21	24.23	24.25	24.27	24.29	24.31	24.33	24.35	24.37	24.39	24.41	24.43	24.45	24.47	24.49	24.51	24.53	24.55	24.57	24.59	24.61	24.63	24.65	24.67	24.69	24.71	24.73	24.75	24.77	24.79	24.81	24.83	24.85	24.87	24.89	24.91	24.93	24.95	24.97	24.99	25.01	25.03	25.05	25.07	25.09	25.11	25.13	25.15	25.17	25.19	25.21	25.23	25.25	25.27	25.29	25.31	25.33	25.35	25.37	25.39	25.41	25.43	25.45	25.47	25.49	25.51	25.53	25.55	25.57	25.59	25.61	25.63	25.65	25.67	25.69	25.71	25.73	25.75	25.77	25.79	25.81	25.83	25.85	25.87	25.89	25.91	25.93	25.95	25.97	25.99	26

10.3 Dimension drawings



TYPE	NET MASS Kg	BASIC UNIT			NET MASS Kg	Xz mm	Yz mm
		Xz mm	Yz mm	Zz mm			
QAS 14 KU	748	825	412	651	835	414	
QAS 20 KU	783	800	427	656	802	428	



NET MASS = Wet engine and radiator (oil, coolant) and full tank.
NET MASS = Dry engine (without coolant and oil) and empty tank.

OUTLET SOCKETS




- 1) 32A 3P+N+PE / 400 V
- 2) 16A 3P+N+PE / 400 V
- 3) 16A 2P+PE / 230 V

ISOMETRIC VIEW (1 : 20)

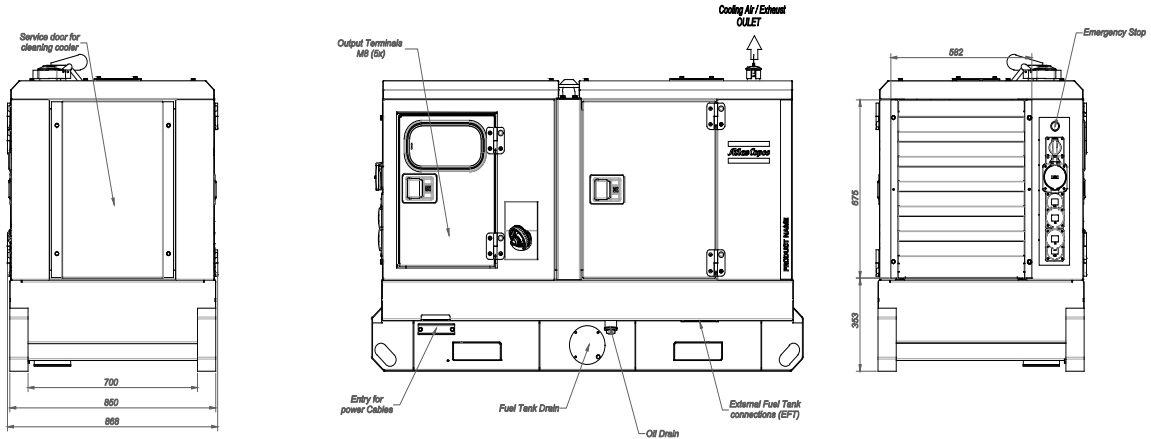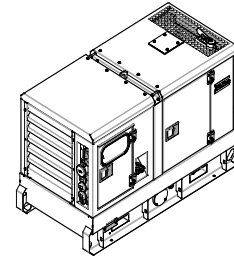

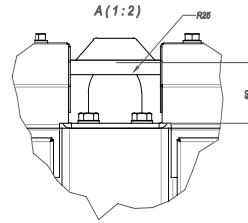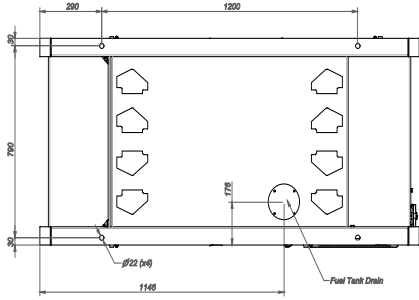



MAINTENANCE SPACE (1 : 20)

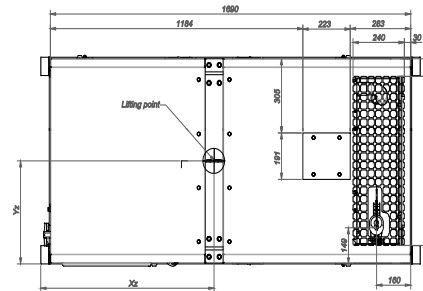
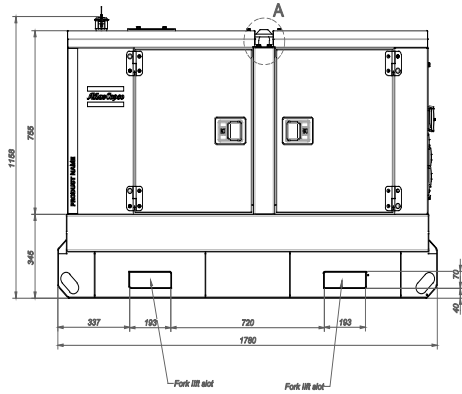
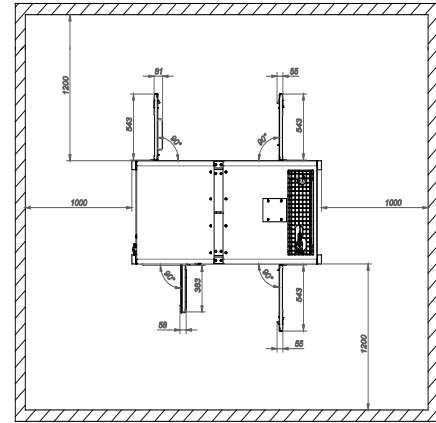


GROUP WITH UNDERCARRIAGE		
TYPE	WET MASS	NET MASS
	Kg	Kg
QAS 14 KU	968	871
QAS 20 KU	1013	916

WET MASS = Wet engine and radiator (oil, coolant) and full tank.
NET MASS = Dry engine (without coolant and oil) and empty tank.

ISOMETRIC VIEW (1 : 20)

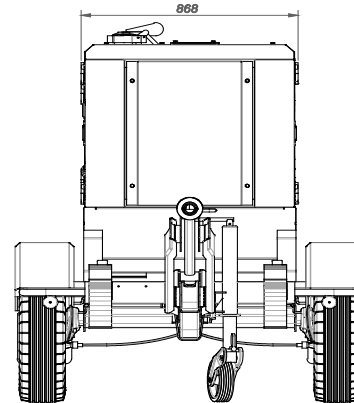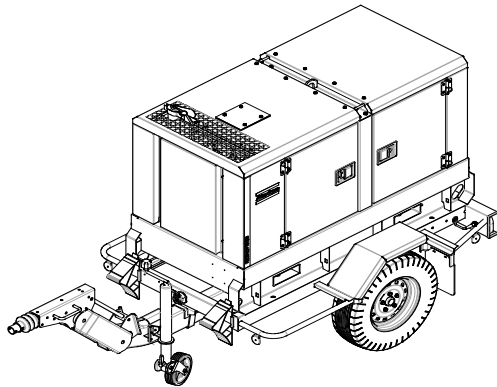

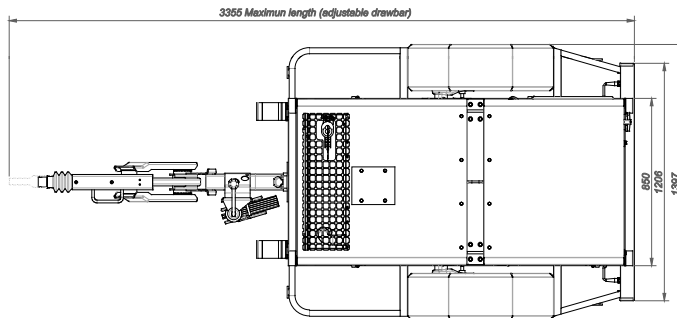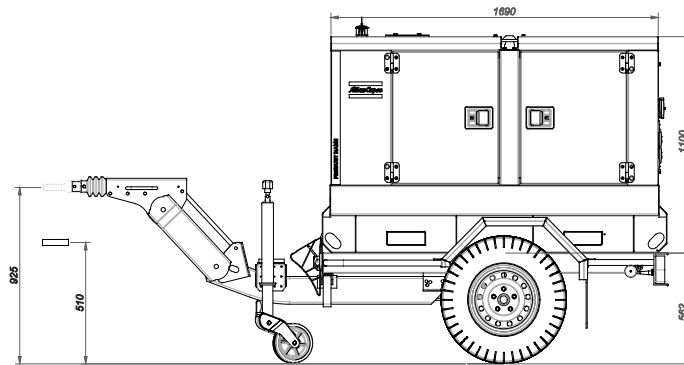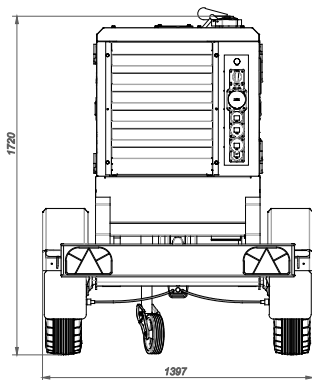


10.4 Conversion list of SI units into British units

1 bar	=	14.504 psi
1 g	=	0.035 oz
1 kg	=	2.205 lbs
1 km/h	=	0.621 mile/h
1 kW	=	1.341 hp (UK and US)
1 l	=	0.264 US gal
1 l	=	0.220 imp gal (UK)
1 l	=	0.035 cu.ft
1 m	=	3.281 ft
1 mm	=	0.039 in
1 m ³ /min	=	35.315 cfm
1 mbar	=	0.401 in wc
1 N	=	0.225 lbf
1 Nm	=	0.738 lbf.ft
$t_{°F}$	=	$32 + (1.8 \times t_{°C})$
$t_{°C}$	=	$(t_{°F} - 32)/1.8$

A temperature difference of 1°C = a temperature difference of 1.8°F.

10.5 Data plate

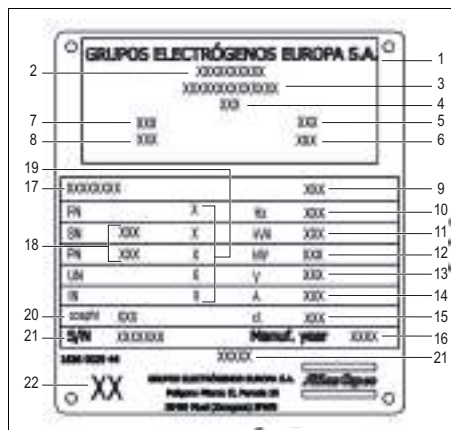


1. Name of manufacturer
2. EEC or national type approved number
3. Vehicle identification number
4. Maximum permitted total weight of the vehicle
5. Maximum permitted load on towing eye (fixed towbar)
6. Maximum permitted axle load (fixed towbar)
7. Maximum permitted load on towing eye (articulated towbar)
8. Maximum permitted axle load (articulated towbar)
9. Model number
10. Frequency
11. Apparent power - PRP
12. Active power - PRP
13. Nominal rated voltage
14. Nominal rated current
15. Generator class
16. Manufacturing year
17. Machine type
18. Mode of operation
19. Winding connections
20. Power factor
21. Serial number
22. EEC mark in accordance with Machine Directive 89/392E

Machine Verhuur Oosterwolde

Machine Verhuur Oosterwolde

Circuit diagrams

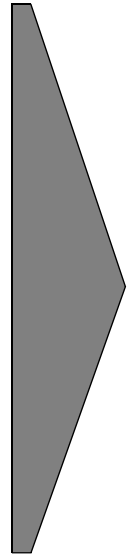


1636 0039 95


Applicable for QAS 14-40- Controller circuit Qc1103™

Legend

Wire size	Colour code
3x3x1.5 mm ²	0=black
a=1 mm ²	1=brown
b=1.5 mm ²	2=red
c=2.5 mm ²	3=orange
d=4 mm ²	4=yellow
e=6 mm ²	5=green
f=10 mm ²	6=blue
g=16 mm ²	7=purple
h=25 mm ²	8=grey
i=35 mm ²	9=white
j=70 mm ²	54=green/yellow
k=95 mm ²	
bbox=1.5 mm ² NSGAFOLU	

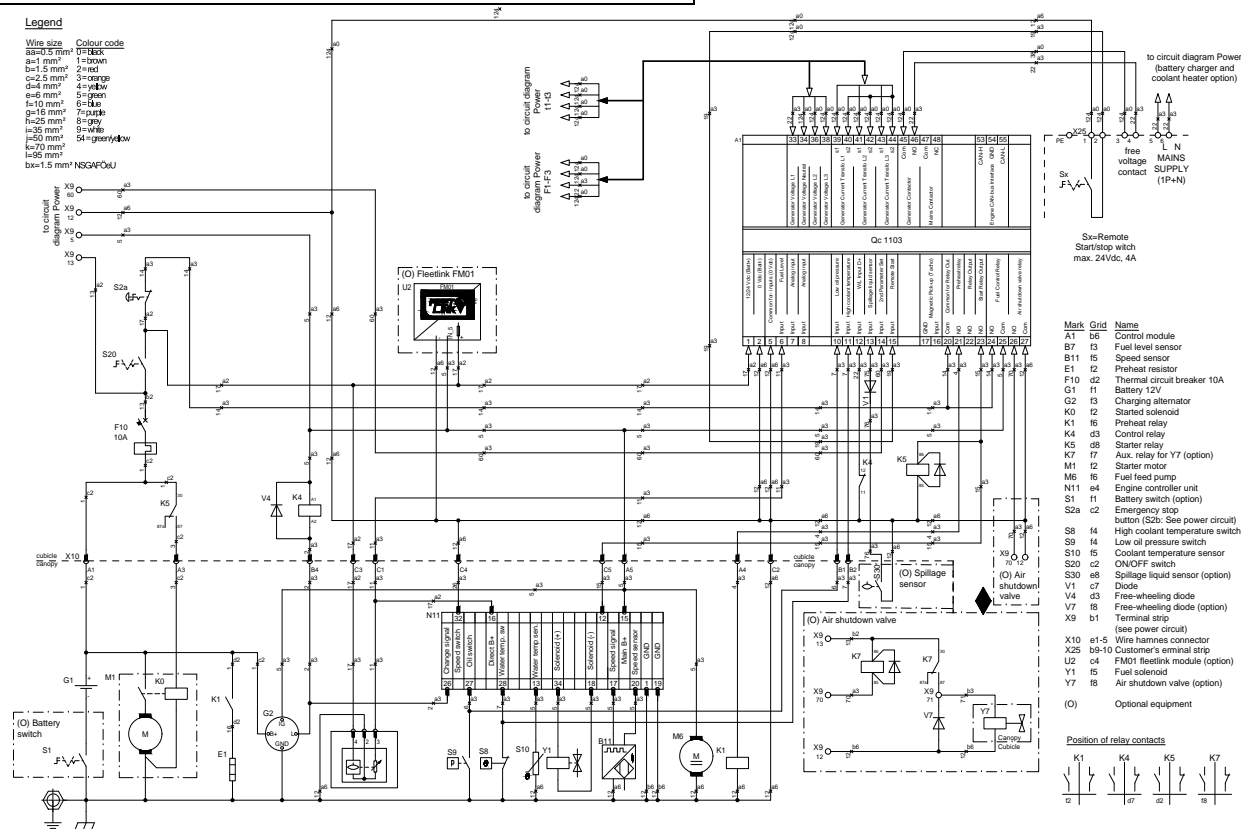


to circuit diagram Power
Battery charger and
coolant heater (option)

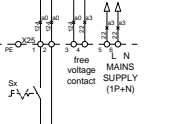

Sx=Remote
Start/stop switch
max. 24Vdc, 4A


- | Mark | Grid | Name |
|------|------|--|
| A1 | b6 | Control module |
| B7 | f3 | Fuel level sensor |
| S11 | e5 | Speed sensor |
| E1 | f2 | Preheat resistor |
| F10 | d2 | Thermal circuit breaker 10A |
| G1 | f1 | Battery 12V |
| G2 | f3 | Charging alternator |
| K0 | f2 | Started solenoid |
| K1 | f6 | Pushheat relay |
| K4 | d3 | Control relay |
| K5 | d8 | Starter relay |
| K7 | f7 | Aux. relay for V7 (option) |
| M1 | f2 | Starter motor |
| M6 | f6 | Fuel feed pump |
| N11 | e4 | Engine controller unit |
| S1 | f1 | Battery switch (option) |
| S2a | c2 | Emergency stop button (S2b: See power circuit) |
| S8 | f4 | High coolant temperature switch |
| S14 | f4 | Low oil pressure switch |
| S10 | f5 | Coolant temperature sensor |
| S20 | c2 | ON/OFF switch |
| S30 | e8 | Spillage liquid sensor (option) |
| V1 | c7 | Diode |
| V4 | d3 | Free-wheeling diode |
| V7 | f8 | Free-wheeling diode (option) |
| X9 | b1 | Terminal strip |
- X10 e1-5 Wire harness connector
X25 b9-10 Customer's terminal strip
L2 c4 FMD1 feedback module (option)
Y1 f5 Fuel solenoid
Y7 f8 Air shutdown valve (option)
- (O) Optional equipment

 


1636 0036 31
Applicable for QAS 14-40- Controller circuit Qc2103™

Legend

Wire size	Colour code
1=1 mm ²	1=brown
1.5=1.5 mm ²	2=red
2.5=2.5 mm ²	3=orange
4=4 mm ²	4=yellow
6=6 mm ²	5=green
10=10 mm ²	6=blue
16=16 mm ²	7=purple
25=25 mm ²	8=grey
35=35 mm ²	9=white
50=50 mm ²	S1=grey/yellow
70=70 mm ²	
95=95 mm ²	
box=1.5 mm ² NSGAFOU	

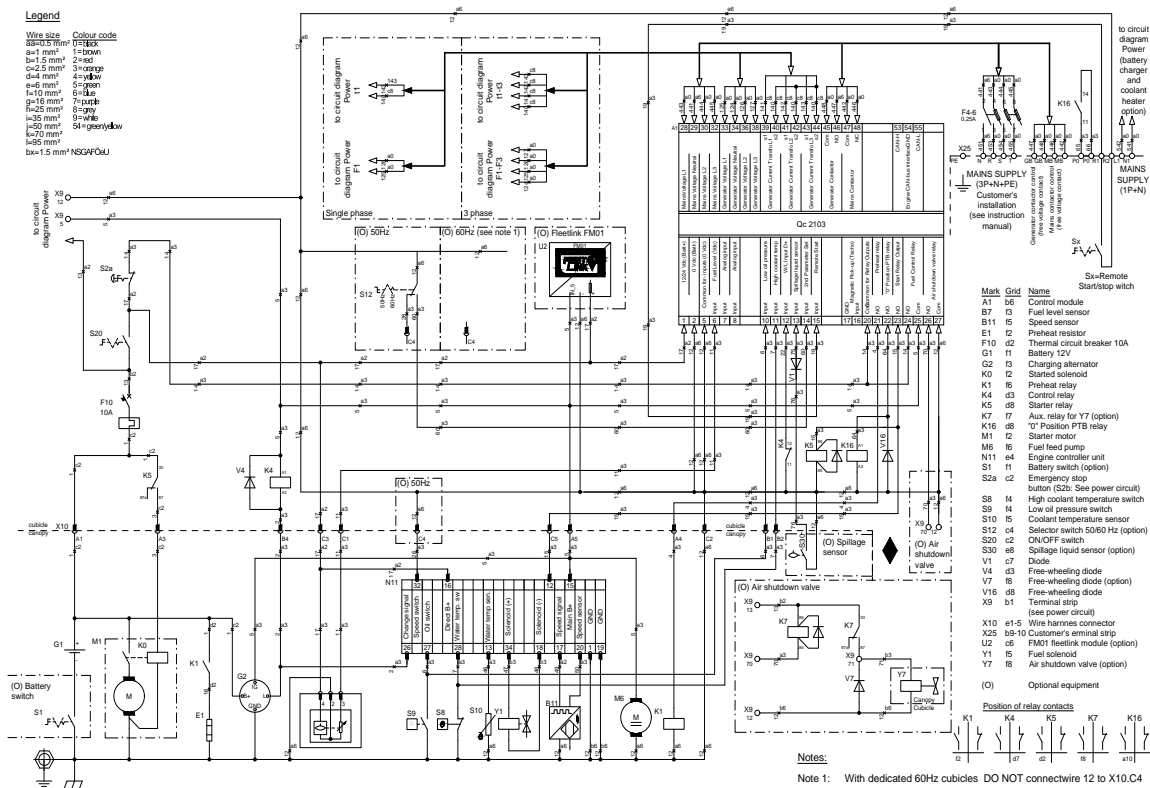

Mark	Grid	Name
A1	B6	Control module
B7	B3	Fuel level sensor
B11	B5	Speed sensor
E1	D2	Preheat resistor
F10	D2	Thermal circuit breaker 10A
G1	F1	Battery 12V
G2	G3	Charging alternator
KO	K2	Started solenoid
K1	B6	Preheat relay
K4	d3	Control relay
K5	D8	Starter relay
K7	F7	Aux. relay for Y7 (option)
K16	d8	Y7 Position P/TB relay
M	F2	Starter motor
M6	B6	Fuel feed pump
N11	e4	Engine controller unit
S1	F1	Battery switch (option)
S2a	c2	Emergency stop button (S2b: See power circuit)
S8	14	High coolant temperature switch
S9	14	Low oil pressure switch
S10	F5	Coolant temperature sensor
S12	d4	Selector switch 50/60 Hz (option)
S20	c2	ON/OFF switch
S30	e8	Spillage liquid sensor (option)
V1	C7	Diode
V4	d3	Free-wheeling diode
V7	B8	Free-wheeling diode (option)
V16	d8	Free-wheeling diode (see power circuit)
X10	e1-5	Wire harness connector
X25	S8-10	Customer's terminal strip
U2	d6	FM01 feedback module (option)
Y1	F5	Fuel solenoid
Y7	B8	Air shutdown valve (option)

 


Notes:
 Note 1: With dedicated 60Hz cubicles DO NOT connect wire 12 to X10.C4

1636 0036 18

Applicable for QAS 14-40- Controller circuit Qc1103™

Legend

Wire size	Colour code
as=0.5 mm ²	17=black
a=1 mm ²	1=beige
ba=1.5 mm ²	2=red
c=2.5 mm ²	3=orange
d=4 mm ²	4=yellow
ea=6 mm ²	5=green
f=10 mm ²	6=blue
ga=16 mm ²	7=black
h=25 mm ²	8=grey
i=35 mm ²	9=white
j=50 mm ²	54=green/yellow
ka=70 mm ²	
l=85 mm ²	
bx=1.5 mm ² NSG4FOU	

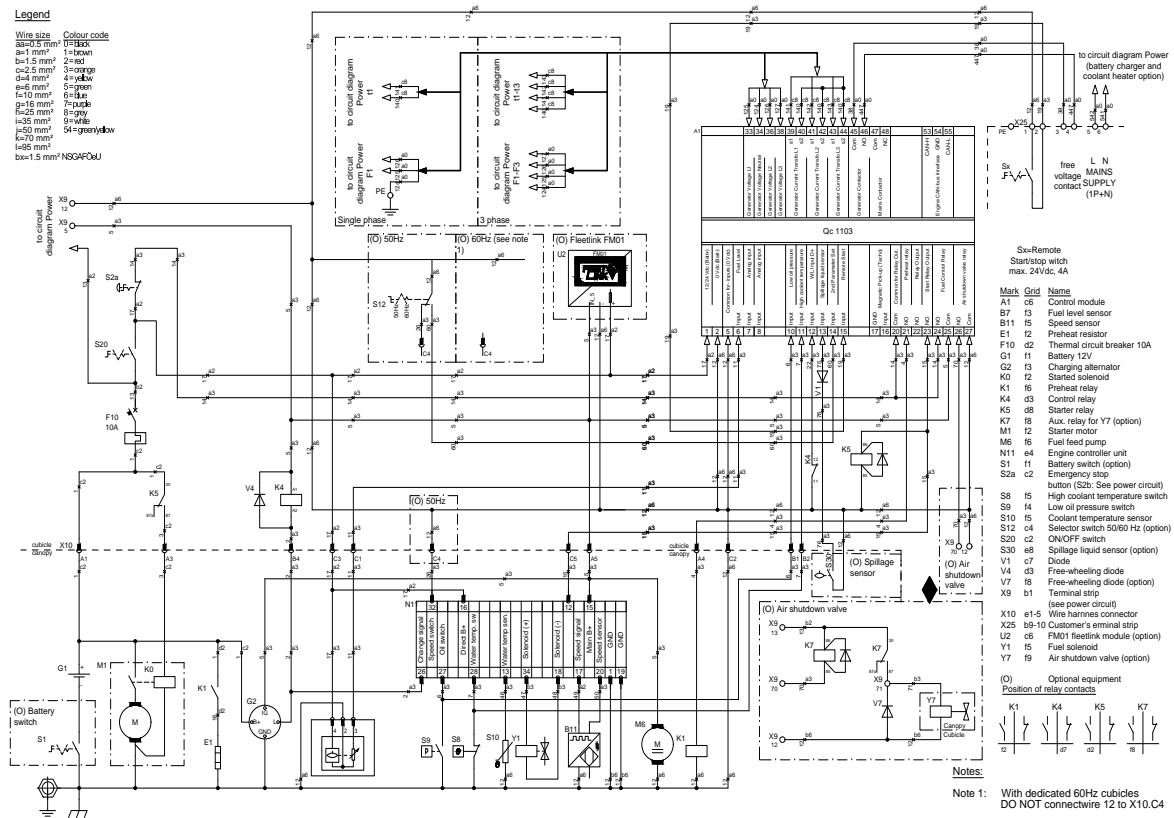

Notes:
 Note 1: With dedicated 60Hz cubicles
 DO NOT connectwire 12 to X10.C4

Machine Verhuur Oosterwolde

Machine Verhuur Oosterwolde

Following documents are provided with this unit:

- Test Certificate
- EC Declaration of Conformity:

EC DECLARATION OF CONFORMITY

1 We, Grupos Electrogenos Europa S.A., declare under our sole responsibility, that the product
 2 Machine name : **Power Generator**
 3 Commercial name :
 4 Serial number :

5 Which falls under the provisions of the article 12.2 of the EC Directive 2006/42/EC on the approximation of
 the laws of the Member States relating to machinery, is in conformity with the relevant Essential Health and
 Safety Requirements of this directive.

The machinery complies also with the requirements of the following directives and their amendments as indicated.

6 Directive on the approximation of laws of the Member States relating to	Harmonized and/or Technical Standards used	Att' mnt
7 Machinery safety	2006/42/EC EN ISO 12100-1 EN ISO 12100-2 UNE EN 12601	
8 Electromagnetic compatibility	2004/108/EC EN 61000-6-2 EN 61000-6-4	
9 Low voltage equipment	2006/95/EC EN 60034 EN 60204-1 EN 60439	
10 Outdoor noise emission	2000/14/EC ISO 3744	

11 The harmonized and the technical standards used are identified in the attachments hereafter
 12 Grupos Electrogenos Europa, S.A. is authorized to compile the technical file

13	Conformity of the specification to the Directives	Conformity of the product to the specification and by implication to the directives	
14	Issued by	Product Engineering	Manufacturing
15	Name		
16	Signature		

17 Place , Date *Muel (Zaragoza), Spain*

Grupos Electrogenos Europa, S.A. A company within the Atlas Copco Group
 Postal address: Phone: +34 902 110 316
 Polígono Praxos II, Parcela 20 Fax: +34 902 110 318
 50650 Muel ZARAGOZA V.A.T A6032480
 Spain For info, please contact your local Atlas Copco representative
 www.atlas-copco.com p. 1/10

- Outdoor Noise Emission Directive 2000/14/EC:

Outdoor Noise Emission Directive 2000/14/EC

1. Conformity assessment procedure followed : Full Quality Assurance

2. Name and address of the notified body : Notified body number 0486
SNCH, Société Nationale de Certification
et d'Homologation
L-5201 Sandweiler

3. Measured sound power level : dB(A)

4. Guaranteed sound power level : dB(A)

5. Electric power : kW

Grupos Electrógenos Europa, S.A. A company within the Atlas Copco Group

Postal address Phone: +34 902 110 318 V.A.T A6024680
Polígono Pizarro II, Parcela 20 Fax: +34 902 110 318
50450 Muel ZARAGOZA
Spain For info, please contact your local Atlas Copco representative
www.atlas-copco.com

Form 160000307
ed. 01/2014/12/03 p.2/10

Machiv

Machine Verhuur Oosterwolde

Machine Verhuur Oosterwolde

